


BLUETOOTH SOUNDTOWER

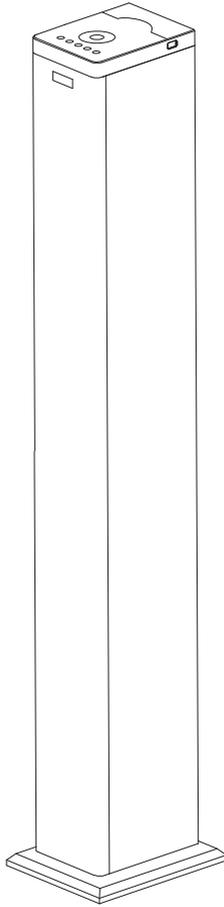

MODEL: GDTSPK02BLK
2.1 CHANNEL SOUNDTOWER WITH BLUETOOTH

USER MANUAL



Goodmans

Content

SPECIFICATION/ACCESSORIES.....	1
WARNING.....	2
INSTALLATION.....	4
PANELS.....	5
REMOTE CONTROL.....	6
BASIC OPERATION.....	7
FM OPERATION.....	8
BLUETOOTH OPERATION.....	9
AUDIO OPERATION.....	10
USB OPERATION.....	11
TROUBLE SHOOTING.....	12
IMPORTANT INFORMATION.....	13

Specification

Power supply	AC 220V-240V~50Hz
Max. power consumption	60W
Input joint	Aux in, USB
Frequency	87.5MHz-108.0MHz
Audio output	2x10W+25W RMS (10%THD)
Bluetooth effective distance	10meters in open air
Bluetooth edition	CSR 2.1 +EDR
Operating conditions	Temperature : 5°C~35°C (Max.75%RH) Installation : on a flat horizontal surface

Accessories



1* Remote Control



1* Audio cable



1* User Manual




1* Power Cable

Warning

1. Read these Instructions - All the safety and operating instructions should be read before this product is operated.
2. Keep these Instructions - The safety and operating instructions should be retained for future reference.
3. Heed all Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operating and use instructions should be followed.
5. Do not use this apparatus near water- The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with a damp cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat Registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug the apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture.
13. Please keep the unit in a good ventilation environment.
14. These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
15. The **MAINS PLUG** is used as disconnect device, the disconnect device shall remain readily operable.
16.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
17.    - This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
 - Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
 - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance in the literature accompanying the appliance.
18. The batteries in remote control shall not be exposed or excessive heat such as sunshine, fire or the like.
19. The apparatus shall not be exposed to dripping or slashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
20. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
21. The battery (battery of batteries or battery pack) shall not be exposed to excessive heat, sunshine or fire.
22. A warning that excessive sound pressure from earphones and headphones can cause hearing loss.

Safety Instructions

Please read and understand all the warnings provided below, as well as and those marked on the unit. This unit has been designed and manufactured to assure personal safety.

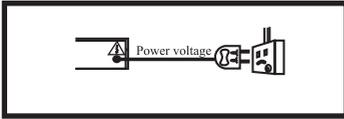


Only use power source that is specified in the User Manual or on the system.




Keep the unit and power plug away from water.




Avoid placing the unit in direct or sunshine or near a heat source.

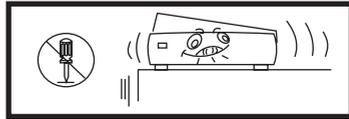

Never open the cover and avoid dropping anything into the unit, such as coins, hairpins and needles for example.

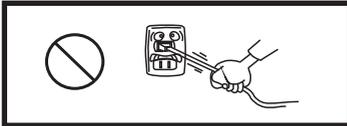

Do not bend or pull the power cable excessively, and do not apply pressure to it by standing on it.

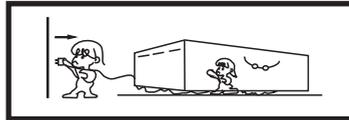

Unplug the unit from the main power outlet when you do not use it for a long time.

ERP II (Energy related products note)


This product complies with the European Commission on the Eco-design Directive and its implementing Regulations-Energy related products. 15 minutes (approx.) later without any input (expect in FM mode), the system will automatically enter standby mode. Follow up the instruction manual to assume the function operation.

Installation Instructions

(INSTALLATION SKETCH MAP)




(DESIGN SKETCH)

Note:
Please tear off
the protective
film before use

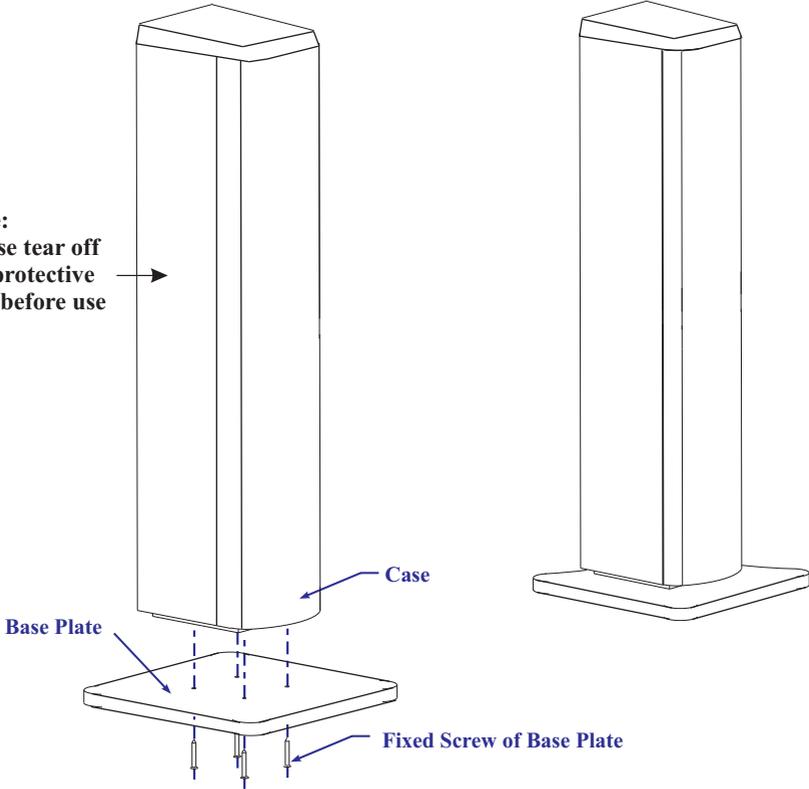


Panel Controls

PANELS

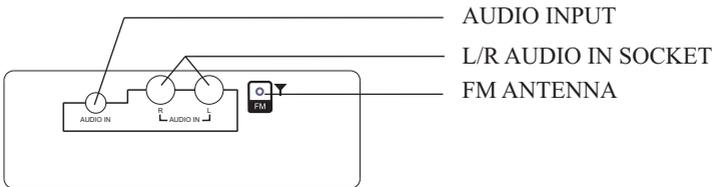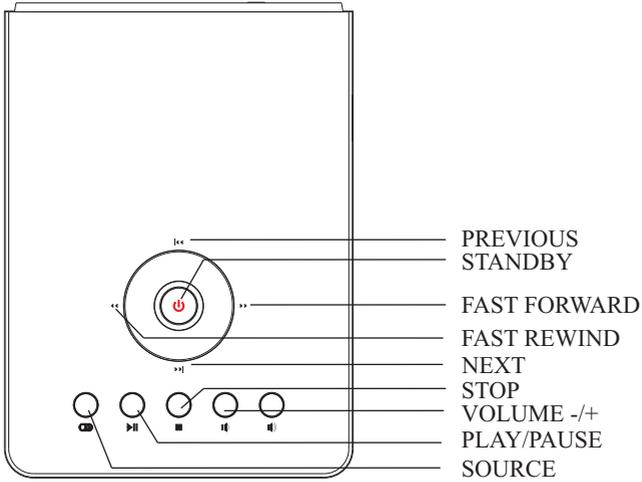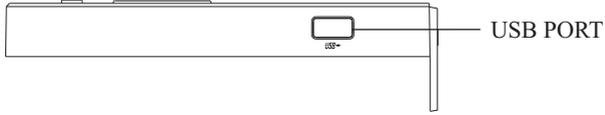

Remote control

1. Align the remote control directly at the remote control sensor of the device.
2. The range of the remote control depends on the charge of the battery.
3. Bright light (sun or artificial light) should not fall directly at the remote control sensor. Bright light can negative influence the efficacy of the remote control.
4. Make sure that there are no obstacles between the remote control and the remote control sensor.

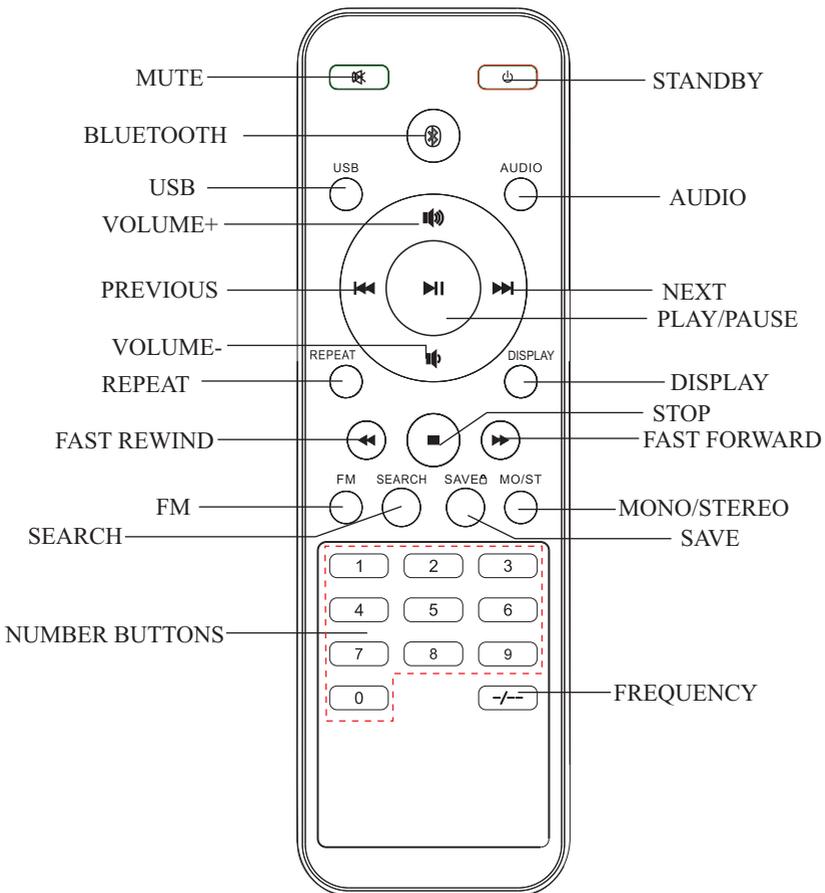

Basic Operation

PREPARATION

- 1) Before the unit is turned on, please check if all the connections are right and safe. Then connect the main power.
- 2) Press the **POWER ON/OFF** button on the back panel to turn on the main power.
- 3) Press the **STANDBY** button to turn on the unit or to the standby mode.

SOURCE BUTTON

Press **SOURCE** button on the front panel to switch to BT, AUX, USB, or FM mode. Or, press the USB, FM, AUDIO, or BT button on remote control to select the mode.

MUTE BUTTON

If you press the **MUTE** button while playing, sound signal will not be heard. Press the **MUTE** button again or the **VOL+/-** buttons to resume the previous volume level.

VOLUME SETTING

Press the **VOL.+/-** buttons to turn the volume up or down.

PREVIOUS AND NEXT

Press the **⏮** or **⏭** button to skip to the previous or next track/station/frequency.

FAST FORWARD AND FAST REWIND

Press the **⏪** or **⏩** button to rewind or forward the track. Press again to resume normal.

NUMBER BUTTONS

Press the **NUMBER** buttons to select the track/station/frequency.

PLAY/PAUSE BUTTON

Press the **▶||** button to pause the music, press again to resume playing.

STOP BUTTON

Press the **STOP** button to stop playing, press **PLAY/PAUSE** button to re-start.

REPEAT BUTTON

Press the **REPEAT** button to select the repeat mode: Repeat One, Repeat All, Repeat off.

DISPLAY

Press the **DISPLAY** button to turn on or off the display screen.

FM operation

1. The range of FM frequency is from 87.50MHz to 108.00MHz.
2. Press **SOURCE** button or **FM** button to enter FM mode.
3. Extend the antenna as far as it can to get the best reception. Vary the antenna direction to find the strongest signal for each station.
4. Press **MO/ST** button on remote control to turn on or off the stereo. If the reception is not good enough, it can turn on the stereo.

SEARCH

Press **SEARCH** button to search stations from low to high frequency; press again to stop searching. After searching all the stations, it starts playing from the first station.

SELECT STATIONS

- 1) Press **FAST REWIND** or **FAST FORWARD** button to adjust the frequency up or down a step of **0.05 MHz**.
- 2) Press **NUMBER** buttons directly to selection the stations.
E.g. to play the station 24, press 2, then press 4 to skip to station 24.
- 3) Press **-/--** button, then press **NUMBER** buttons on remote to select frequency.
E.g. to select 108.50MHz, press **-/--** button, then press **1, 8, 5, 0** to enter 108.50MHz.
- 4) Press **PREVIOUS** or **NEXT** button to skip to the previous or next station.

SAVE STATIONS

- 1) Press **NUMBER** buttons to select the preset number for saving the wanted station.
- 2) Press **-/--** button and number buttons to select the frequency.
- 3) Press **SAVE** button to save the wanted station/frequency into the preset number.
E.g. to save the station 88.50MHz into preset 13, press **1, 3** to select preset 13, then press **-/--** and next press **8, 8, 5, 0** to select 88.50MHz, at last press **SAVE** button.

Bluetooth operation

BLUETOOTH PAIRING

1. Put the Bluetooth device (e.g. smart phone) within the 10m Bluetooth search range. Then turn on the Bluetooth function on the phone.
2. Press **BLUETOOTH** button on remote or press **SOURCE** button on the panel to enter Bluetooth mode. The indicator flashes blue quickly in pairing status.
3. Enter the Bluetooth searching interface on the phone and start to search the devices.
4. Select the device name **GDTSPK02** from the search list. If they are paired successfully, there comes an audible signal and the indicator lit steadily in blue.
5. Some device may ask you to select **OK/YES/PAIR** to pair the phone with the unit. And some even ask to input the password, just input "0000" (four Zero) to pair.
6. To disconnect the device and connect to a different device:
Turn off the Bluetooth function on your device and un-pair the unit with the BT device. Then follow the pairing **Steps 2-5** to pair with a new device.

Please follow the **BASIC OPERATION** to control the playback on Bluetooth mode.

To receive a phone call while playing music:

- When a call is received while playing music through a phone, the music will stop automatically.
- When the call ends, depending on the setting of your phone, the current track may resume playback.

NOTE:

1. Some devices, such as an iPhone, connect immediately after pairing so the indicator remains on.
2. The unit can only connect with one device at a time and the unit memorizes the last paired device the next time turning on the Bluetooth mode.
3. If the device is out of Bluetooth range (10m), put the device within the BT search range and make connection again manually if it is suspended.

Audio operation

Before connecting with the music devices, pay attention to the picture below.


1. Each connection must be safe and firm. Disconnect the power cable before you have finished all the connections.
2. The unit can connect with the DVD player/MP3 player/Smart phone/Computer or other music device via a audio cable.

Select one of the below connections

1. Connect one end of 3.5mm audio cable to the Mp3 player's line output/headphone and the other end to the **AUDIO L/R** sockets on the rear panel of the unit.
2. Connect one end of 3.5mm audio cable to the unit's **AUDIO IN** socket and the other end to the DVD player's **L/R AUDIO OUTPUT** sockets on the rear panel of the unit.

Operation

1. Press **SOURCE** button or **AUDIO** button to enter the audio mode.
2. Control the playback only by the DVD/MP3 player.
3. If the **AUDIO IN** and **L/R AUDIO IN** sockets are connected at the same time, the device connected with **AUDIO IN** socket is prior to play.

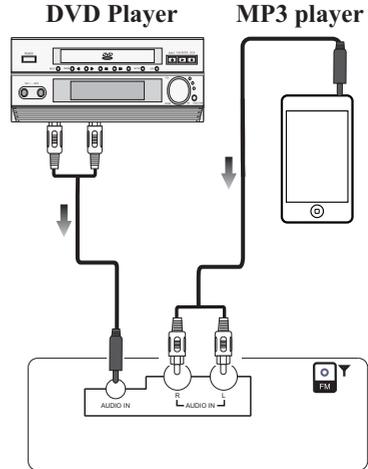

USB connection

USB OPERATION

1. Insert USB stick to the USB port to connect with this unit.
2. Press **SOURCE** button or **USB** button to enter USB mode.
3. Once the unit detects the USB stick, it starts playing music automatically.
4. Please refer to **BASIC OPERATION** for playback control.

Note:

1. Depending on the amount of data and media speed, it may take longer time to read files stored in the USB device. In some cases, reading time may be as long as 60 seconds. This is not a malfunction.
2. The supported files format is Mp3 with an extended name ".mp3".
3. For some music files, even when they are in a supported format, the unit may be unable to play because of the format compatibility.

Trouble shooting

For your convenience, we have listed some methods to solve common problems you may encounter when you use the system. If the problem occurs repeatedly, contact the nearest maintenance center.

Power supply can not be turned on

- * Make sure that the power cord is fully inserted in the power outlet.

The remote control does not work

- * Battery is used up
- * The front end of the remote control is not aimed at the infrared reception part of the player.

No sound

- * Make sure that the audio cable is connected correctly and securely to the back of your unit and to the sound system.
- * Make sure that the sound system is set to the correct audio input.
- * Turn your unit off, then back on.

The unit does not work at all

- * The embedded microcomputer may have failed because of a lightning strike, static, or other interference.

Important information

Waste Electrical and Electronic Equipment Directive

The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.



Correct disposal of this product

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



