 


GETTING STARTED:

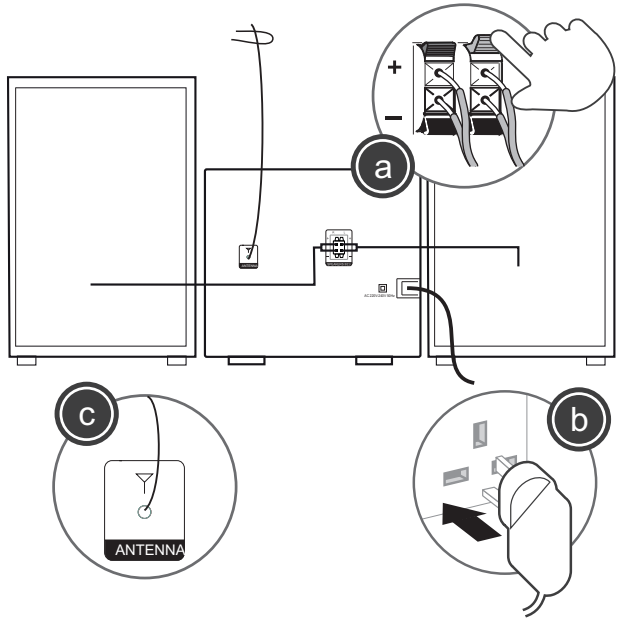

- a** Insert the speaker cables into the back of the unit to connect the left and right speakers.
- b** Plug in the mains cable and turn the power on at the power supply.
- c** Extend the FM antenna to get the best reception.

WANT TO KNOW MORE?

 
The full user manual is available online at:



www.goodmans.co.uk/support

Goodmans


DAB CD MICRO SYSTEM

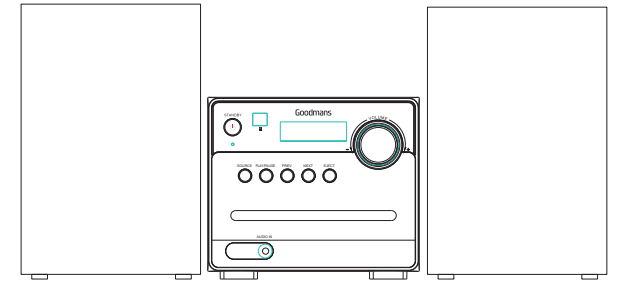

DAB CD Micro System
Model: MICRODAB10




 PLAY A CD:

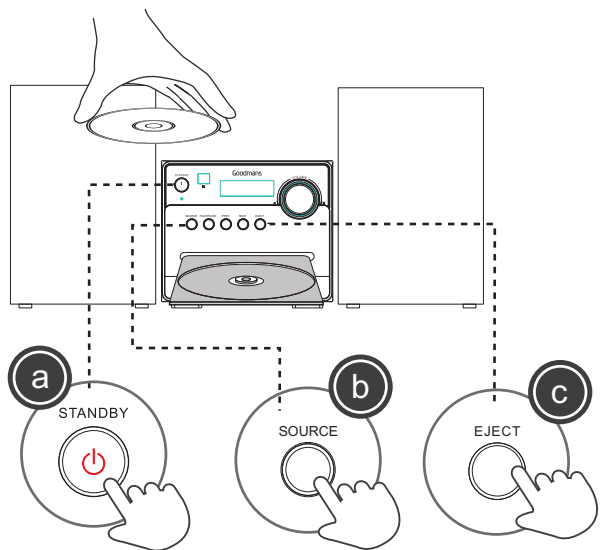

- a** Press the STANDBY button to turn on the unit.
- b** Press the SOURCE button to enter the CD mode.
- c** Press the EJECT button to open the disc drawer and insert a disc. Press the EJECT button again to close. Playback will begin automatically from the first track.

 LISTEN TO DAB RADIO:

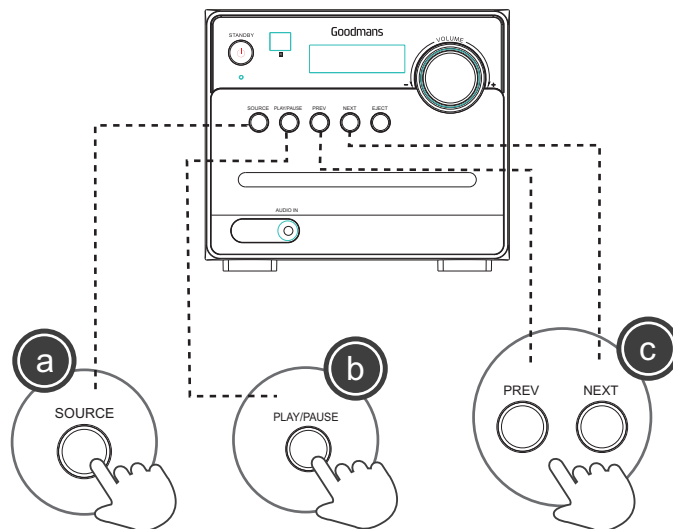


- a** Press the SOURCE button to switch to the DAB mode.
- b** Press the PLAY/PAUSE button to activate the stations.
- c** Press the PREV/NEXT button to select the previous or next stations, then press the PLAY/PAUSE button to activate.

LISTEN TO FM RADIO:

- a** Press the SOURCE button to enter the FM mode.
- b** Press and hold the PREV/NEXT button to scan through the frequency range.
- c** Press the PREV/NEXT button to increase or decrease the frequency by 0.05MHz increments.

 PLAY MUSIC VIA AUDIO CABLE:

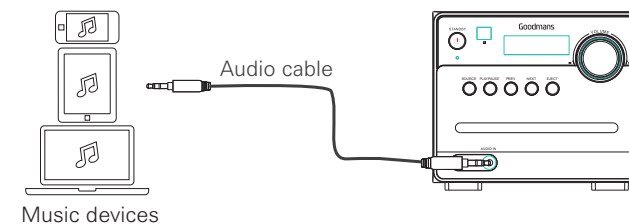

- a** Press the SOURCE button to enter the Aux in (Audio) mode.
- b** Connect your device to the AUDIO IN socket via a 3.5mm aux in cable.
- c** Control playback via your connected audio device.