



HS-TA425

YU(S),YL(S)
YJ(S),YC(S)
YZ(S)

HS-TA481

YU(WT)

SERVICE MANUAL

STEREO
RADIO CASSETTE PLAYER

BASIC TAPE MECHANISM :8ZM-3 P5NC (YCB2SC)
BASIC TAPE MECHANISM :8ZM-3 YP15NF (YU1BWTC)
BASIC TAPE MECHANISM :8ZM-3 YP5NF (YUBSC,YL1SC,
YJ1SC,YZ1SC)

Replace this Service Manual with "Revision Publishing" when it is issued.

aiwa

S/M Code No. 09-027-361-2T1

SIMPLE

DATA

ACCESSORIES PARTS LIST -1/1

! = SAFETY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.
 However, please note that not all components will be available as spare parts for after-sales service.
 Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
 Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL					
					HS-TA425 YUBSC	HS-TA481 YULBWTC	HS-TA425 YL1SC	HS-TA425 YJ1SC	HS-TA425 YZ1SC	HS-TA425 YCB2SC
X AS1001		87-080-027-210	S-SCREW, CLIP-BELT4-5.5 POLYCAR	a	b	c	d	e	f	
O AS1002		87-B30-319-110	HEADPHONE, HP-M046 (S) NECK-BAND	a	f	
O AS1003		87-B30-448-010	HEADPHONE, HP-M029 (T2DG)	X .	b	
O AS1004		87-B30-558-010	HEADPHONE, HP-M006 (T2) SP	X .	.	c	d	e	.	
X AS1005		87-B40-175-010	BAG, PP 0.03-55-120	a	b	c	d	e	f	
X AS1006		8Z-HRB-051-110	CLIP, BELT	a	b	c	d	e	f	
X AS1007		PC-HRH-233-070	HS-TA425YUBSC	a	
X AS1008		PC-HRH-252-070	HS-TA481YULBWTC	.	b	
X AS1009		PC-HRH-303-070	HS-TA425YL1SC	.	.	c	.	.	.	
X AS1010		PC-HRH-373-070	HS-TA425YJ1SC	.	.	.	d	.	.	
X AS1011		PC-HRH-383-070	HS-TA425YZ1SC	e	.	
X AS1012		PC-HRH-513-070	HS-TA425YCB2SC	f	
X AS1013		8C-HRH-970-010	LBL, POP YL	.	.	c	.	.	.	
X AS1014		8C-HRH-971-010	LBL, POP YZ	.	.	.	d	e	.	
X AS1015		87-056-833-010	BAG, PP 0.03-130-240	.	.	c	d	e	.	
X AS1016		87-B40-481-010	LBL, S YCB2	f	
X AS1017		8C-HRH-851-010	COVER, TOP 481 YULBWTC	a	b	.	.	.	f	
X AS1018		8C-HRH-852-010	COVER, BOTTOM 481 YULBWTC	a	b	.	.	.	f	
X AS1019		8C-HRH-853-010	BD, PRINTED 481 YULBWTC	.	b	
X AS1020		8C-HRH-854-010	CTN, INNER 481 YULBWTC	.	b	
					HS-TA425 YUBSC	HS-TA481 YULBWTC	HS-TA425 YL1SC	HS-TA425 YJ1SC	HS-TA425 YZ1SC	HS-TA425 YCB2SC
X AS1021		8C-HRH-855-010	CTN, OUTER 481 YULBWTC	.	b	
X AS1022		8C-HRH-856-010	BD, PRINTED 425 YUBSC	a	
X AS1023		8C-HRH-859-010	CTN, INNER 425 YUBSC	a	
X AS1024		8C-HRH-860-010	CTN, OUTER 425 YUBSC	a	
X AS1025		8C-HRH-861-010	CTN, PRINTED 425 YL1SC	.	.	c	.	.	.	
X AS1026		8C-HRH-862-010	CTN, INNER 425 YL1SC	.	.	c	.	.	.	
X AS1027		8C-HRH-863-010	CTN, OUTER 425 YL1SC	.	.	c	.	.	.	
X AS1028		8C-HRH-864-010	CTN, PRINTED 425 YZ1SC	e	.	
X AS1029		8C-HRH-865-010	CTN, INNER 425 YZ1SC	e	.	
X AS1030		8C-HRH-866-010	CTN, OUTER 425 YZ1SC	e	.	
X AS1031		8C-HRH-870-010	CTN, PRINTED 425 YJ1SC	.	.	.	d	.	.	
X AS1032		8C-HRH-871-010	CTN, INNER 425 YJ1SC	.	.	.	d	.	.	
X AS1033		8C-HRH-872-010	CTN, OUTER 425 YJ1SC	.	.	.	d	.	.	
X AS1034		8C-HRH-873-010	BD, PRINTED 425 YCBSC	f	
X AS1035		8C-HRH-876-010	CTN, INNER 425 YCB2SC	f	
X AS1036		8C-HRH-877-010	CTN, OUTER 425 YCB2SC	f	
X AS1037		87-056-146-010	SH, CAUTION HP-N	a	b	
X AS1038		87-056-168-010	SH, CAUTION INF-WARR (EC)	e	.	
X AS1039		87-B50-078-010	LIST, FACILITY (S) -0007	.	.	c	d	e	.	
O AS1040		8C-HRH-901-010	IB, YU/YC (ESF) S TA425	a	f	
					HS-TA425 YUBSC	HS-TA481 YULBWTC	HS-TA425 YL1SC	HS-TA425 YJ1SC	HS-TA425 YZ1SC	HS-TA425 YCB2SC
O AS1041		8C-HRH-902-010	IB, YJ/YHT (ECCA) S TA425	.	.	.	d	.	.	
O AS1042		8C-HRH-904-010	IB, YL (ESP) S TA425	.	.	c	.	.	.	
O AS1043		8C-HRH-905-010	IB, YZ (EGF) S TA425	e	.	
O AS1044		8C-HRH-906-010	IB, YZ (SID) S TA425	e	.	
O AS1045		8C-HRH-907-010	IB, YZ (PHC) S TA425	e	.	
X AS1046		8C-HRH-910-010	WARR-CARD, U TA425	a	
O AS1047		8C-HRH-911-010	IB, YU (ESF) S TA481	.	b	
X AS1048		8C-HRH-918-010	WARR-CARD, C(E) TA425	f	
X AS1049		8C-HRH-919-010	WARR-CARD, C(F) TA425	f	
X AS1050		8C-HRH-920-010	WARR-CARD, U TA481	.	b	

ELECTRICAL PARTS LIST -1/2

! = SAFETY PARTS
C = Components marked

All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.


UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	HS-TA425 YUBSC	HS-TA481 YULBWTC	HS-TA425 YLISC	HS-TA425 YJ1SC	HS-TA425 YZ1SC	HS-TA425 YCB2SC
FRONT IF MPX	O	BPF0101	87-A91-680-010	FLTR,GFMB5-C3	a	b	c	d	e	f
FRONT IF MPX	O	C	0101	87-012-162-080	C-CAP,U 1P-50 C CH GRM	a	b	c	d	e
FRONT IF MPX	O	C	0102	87-012-178-080	C-CAP,U 18P-50 J CH GRM	a	b	c	.	f
FRONT IF MPX	O	C	0102	87-012-179-080	C-CAP,U 20P-50 J CH GRM	.	.	d	e	f
FRONT IF MPX	O	C	0103	87-012-183-080	C-CAP,U 30P-50 J CH GRM	a	b	c	.	f
FRONT IF MPX	O	C	0103	87-012-184-080	C-CAP,U 33P-50 J CH GRM	.	.	d	e	f
FRONT IF MPX	O	C	0104	87-012-165-080	C-CAP,U 3P-50 C CH GRM	a	b	c	.	f
FRONT IF MPX	O	C	0104	87-012-167-080	C-CAP,U 5P-50 C CH GRM	.	.	d	e	f
FRONT IF MPX	O	C	0109	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d	e
FRONT IF MPX	O	C	0110	87-010-805-080	C-CAP,S 1-16 Z F GRM	a	b	c	d	e
FRONT IF MPX	O	C	0111	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d	e
FRONT IF MPX	O	C	0112	87-010-831-080	C-CAP,U 0.1-16 Z F GRM	a	b	c	d	e
FRONT IF MPX	O	C	0113	87-A10-262-080	C-CAP,U 1-10 Z F	a	b	c	d	e
FRONT IF MPX	O	C	0114	87-010-831-080	C-CAP,U 0.1-16 Z F GRM	a	b	c	d	e
FRONT IF MPX	O	C	0115	87-010-784-080	C-CAP,U 0.012-25 K B GRM	a	b	c	d	e
FRONT IF MPX	O	C	0116	87-010-784-080	C-CAP,U 0.012-25 K B GRM	a	b	c	d	e
FRONT IF MPX	O	C	0117	87-010-785-080	C-CAP,U 0.015-25 K B GRM	a	b	c	d	e
FRONT IF MPX	O	C	0118	87-010-785-080	C-CAP,U 0.015-25 K B GRM	a	b	c	d	e
FRONT IF MPX	O	C	0119	87-010-831-080	C-CAP,U 0.1-16 Z F GRM	a	b	c	d	e
FRONT IF MPX	O	C	0120	87-010-831-080	C-CAP,U 0.1-16 Z F GRM	a	b	c	d	e
FRONT IF MPX	O	C	0121	87-015-688-040	CAP,E 4.7-35 M 7L SRA	a	b	c	d	e
FRONT IF MPX	O	C	0122	87-A10-489-040	CAP,E 220-4 7L SR	a	b	c	d	e
FRONT IF MPX	O	C	0123	87-012-286-080	C-CAP,U 0.01-25 K B GRM	a	b	c	d	e
FRONT IF MPX	O	C	0127	87-012-180-080	C-CAP,U 22P-50 J CH GRM	a	b	c	d	e
FRONT IF MPX	X	CD	0101	87-A90-990-010	FLTR,CDA10.7 MG77AT6-Z	a	b	c	d	e
FRONT IF MPX	O	CF	0101	87-A91-087-010	FLTR,PFS 450A6 B	a	b	c	d	e
FRONT IF MPX	O	CF	0102	87-A90-988-010	FLTR,KMFC5153 T6-Z	a	b	c	d	e
FRONT IF MPX	X	CF	0102	87-A90-989-010	FLTR,SFE10.7 MS239T6-Z	a	b	c	d	e
FRONT IF MPX	S	IC	0101	87-A20-851-040	C-IC,TA2111F	a	b	c	d	e
FRONT IF MPX	O	L	0101	8C-HRH-602-010	BAR-ANT,MW	a	b	c	d	e
FRONT IF MPX	O	L	0102	8C-HRH-604-010	COIL,FM RF	a	b	c	d	e
FRONT IF MPX	O	L	0103	8C-HRH-603-010	COIL,FM OSC	a	b	c	d	e
FRONT IF MPX	O	L	0104	87-A50-795-010	COIL,AM OSC 5PY 270UH	a	b	c	d	e
FRONT IF MPX	O	L	0105	87-A90-663-010	IFT,MW 5L H6.4	a	b	c	d	e
FRONT IF MPX	X	R	0101	88-108-000-080	C-JUMPER,U	a	b	c	d	e
FRONT IF MPX	O	R	0102	88-108-332-080	C-RES,U 3.3K-1/16W J	a	b	c	d	e
FRONT IF MPX	X	R	0103	88-108-683-080	C-RES,U 68K-1/16W J	a	b	c	d	e
FRONT IF MPX	X	R	0104	88-108-683-080	C-RES,U 68K-1/16W J	a	b	c	d	e
FRONT IF MPX	X	R	0105	88-108-120-080	C-RES,U 12-1/16W J	a	b	c	d	e
FRONT IF MPX	X	R	0106	88-108-100-080	C-RES,U 10-1/16W J	a	b	c	d	e
FRONT IF MPX	X	R	0107	88-108-122-080	C-RES,U 1.2K-1/16W J	a	b	c	d	e
FRONT IF MPX	X	R	0108	88-108-220-080	C-RES,U 22-1/16W J	a	b	c	d	e
FRONT IF MPX	O	S	0101	87-A92-137-010	C-SW,SL 1-1-2 SSSS8-S501	a	b	c	d	e
FRONT IF MPX	O	VC	0101	87-A91-700-010	TUN-CAP,20P-160P H7.5 450KHZ-N	a	b	c	d	e
GOV	O	C	0051	87-A10-489-040	CAP,E 220-4 7L SR	a	b	c	d	e
GOV	O	C	0052	87-A10-262-080	C-CAP,U 1-10 Z F	a	b	c	d	e
GOV	O	R	0051	87-022-335-080	C-RES,S 180-1/10W F	a	b	c	d	e
GOV	X	R	0053	88-108-182-080	C-RES,U 1.8K-1/16W J	a	b	c	d	e
GOV	X	R	0054	88-108-221-080	C-RES,U 220-1/16W J	a	b	c	d	e
GOV	O	SFR0051	87-024-050-010	SFR,1K V VZ066H1	a	b	c	d	e	
PRE-MAIN AMP	O	C	0001	87-012-275-080	C-CAP,U 1200P-50 K B GRM	a	b	c	d	e
PRE-MAIN AMP	O	C	0002	87-012-275-080	C-CAP,U 1200P-50 K B GRM	a	b	c	d	e
PRE-MAIN AMP	O	C	0003	87-010-501-040	CAP,E 47-4 M 5L SRE	a	b	c	d	e
PRE-MAIN AMP	O	C	0004	87-A10-488-040	CAP,E 47-4 7L SR	a	b	c	d	e
PRE-MAIN AMP	O	C	0007	87-012-285-080	C-CAP,U 8200P-50 K B GRM	a	b	c	d	e
PRE-MAIN AMP	O	C	0008	87-012-285-080	C-CAP,U 8200P-50 K B GRM	a	b	c	d	e
PRE-MAIN AMP	O	C	0009	87-010-831-080	C-CAP,U 0.1-16 Z F GRM	a	b	c	d	e
PRE-MAIN AMP	O	C	0010	87-010-501-040	CAP,E 47-4 M 5L SRE	a	b	c	d	e
PRE-MAIN AMP	O	C	0011	87-010-805-080	C-CAP,S 1-16 Z F GRM	a	b	c	d	e
PRE-MAIN AMP	O	C	0012	87-010-805-080	C-CAP,S 1-16 Z F GRM	a	b	c	d	e
PRE-MAIN AMP	O	C	0013	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d	e
PRE-MAIN AMP	O	C	0014	87-012-274-080	C-CAP,U 1000P-50 K B GRM	a	b	c	d	e
PRE-MAIN AMP	O	C	0015	87-A10-489-040	CAP,E 220-4 7L SR	a	b	c	d	e
PRE-MAIN AMP	O	C	0016	87-A10-489-040	CAP,E 220-4 7L SR	a	b	c	d	e
PRE-MAIN AMP	O	C	0017	87-010-831-080	C-CAP,U 0.1-16 Z F GRM	a	b	c	d	e
PRE-MAIN AMP	O	C	0018	87-010-831-080	C-CAP,U 0.1-16 Z F GRM	a	b	c	d	e
PRE-MAIN AMP	O	C	0019	87-A10-262-080	C-CAP,U 1-10 Z F	a	b	c	d	e
PRE-MAIN AMP	S	D	0001	87-A40-630-040	C-DIODE,RB411D	.	.	d	.	f
PRE-MAIN AMP	S	IC	0001	87-A21-684-040	C-IC,TA2145AF	a	b	c	d	e
PRE-MAIN AMP	O	J	0001	85-HRL-623-010	JACK,3.5 BLK ST BLK	a	b	c	d	e
PRE-MAIN AMP	O	J	0002	87-A61-124-110	JACK,DC DIA2.75 BLK TC	.	b	.	d	.
PRE-MAIN AMP	X	JR	0001	88-108-000-080	C-JUMPER,U	a	.	c	.	e
PRE-MAIN AMP	X	JR	0002	88-108-000-080	C-JUMPER,U	a	b	c	d	e
PRE-MAIN AMP	X	JR	0003	88-108-000-080	C-JUMPER,U	a	b	c	d	e
PRE-MAIN AMP	X	JR	0004	88-129-000-080	C-JUMPER, 3216	a	b	c	d	e
PRE-MAIN AMP	X	JR	0005	88-108-000-080	C-JUMPER,U	a	b	c	d	e
PRE-MAIN AMP	X	JR	0006	88-108-000-080	C-JUMPER,U	a	b	c	d	e
PRE-MAIN AMP	X	JR	0007	88-108-000-080	C-JUMPER,U	a	b	c	d	e
PRE-MAIN AMP	X	JR	0008	88-129-000-080	C-JUMPER, 3216	a	b	c	d	e
PRE-MAIN AMP	X	JR	0010	88-108-000-080	C-JUMPER,U	a	b	c	d	e

ELECTRICAL PARTS LIST -2/2

! = SAFETY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.
 However, please note that not all components will be available as spare parts for after-sales service.
 Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
 Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL					
					HS-TA425 YUBSC	HS-TA481 YULBWT	HS-TA425 YL1SC	HS-TA425 YJ1SC	HS-TA425 YZ1SC	HS-TA425 YCB2SC
PRE-MAIN AMP	X	JW 0001	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0002	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0003	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0004	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0005	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0006	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0007	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0008	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0009	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0010	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0011	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0012	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0013	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	X	JW 0014	88-100-000-010	PLATING-JW, 0.58 SN95	a	b	c	d	e	f
PRE-MAIN AMP	O	L 0001	87-A50-605-010	COIL,RF CHOKE CECS	a	b	c	d	e	f
PRE-MAIN AMP	X	L 0002	88-121-100-080	RES,10-1/8W J	a	b	c	d	e	f
PRE-MAIN AMP	S	Q 0001	87-026-262-080	C-TR,RN1407	a	b	c	d	e	f
PRE-MAIN AMP	S	Q 0002	87-026-268-080	C-TR,RN2411	a	b	c	d	e	f
PRE-MAIN AMP	S	Q 0003	87-026-262-080	C-TR,RN1407	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0001	88-108-681-080	C-RES,U 680-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0002	88-108-681-080	C-RES,U 680-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0003	88-108-564-080	C-RES,U 560K-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0004	88-108-564-080	C-RES,U 560K-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0005	88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0006	88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0009	88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0010	88-108-183-080	C-RES,U 18K-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0011	88-108-000-080	C-JUMPER,U	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0011	88-108-560-080	C-RES,U 56-1/16W J	e	.
PRE-MAIN AMP	X	R 0012	88-108-000-080	C-JUMPER,U	a	b	c	d	.	f
PRE-MAIN AMP	X	R 0012	88-108-560-080	C-RES,U 56-1/16W J	e	.
PRE-MAIN AMP	X	R 0013	88-108-399-080	C-RES,U 3.9-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0014	88-108-399-080	C-RES,U 3.9-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	O	R 0016	88-108-103-080	C-RES,U 10K-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0017	88-129-000-080	C-JUMPER, 3216	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0018	88-108-152-080	C-RES,U 1.5K-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	O	R 0019	88-108-563-080	C-RES,U 56K-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	X	R 0020	88-108-333-080	C-RES,U 33K-1/16W J	a	b	c	d	e	f
PRE-MAIN AMP	O	S 0001	87-A91-726-110	SW,LEAF P5	a	b	c	d	e	f
PRE-MAIN AMP	O	S 0002	87-A91-286-010	C-SW,SL 1-2-2 SS-350-B22B-C-L	a	b	c	d	e	f
PRE-MAIN AMP	O	S 0003	8Z-HRB-607-010	SW,SL 2-2-2 SSZZ-S-502(S)	a	b	c	d	e	f
PRE-MAIN AMP	O	VR 0001	87-A90-981-110	VR,RTRY 20KBX1	a	b	c	d	e	f
SUPER BASS	O	C 0401	87-A10-025-080	C-CAP,U 0.22-16 Z F	a	b	c	d	e	f
SUPER BASS	O	C 0402	87-A10-025-080	C-CAP,U 0.22-16 Z F	a	b	c	d	e	f
SUPER BASS	O	C 0403	87-010-831-080	C-CAP,U 0.1-16 Z F GRM	a	b	c	d	e	f
SUPER BASS	O	R 0401	88-108-123-080	C-RES,U 12K-1/16W J	a	b	c	d	e	f
SUPER BASS	O	R 0402	88-108-123-080	C-RES,U 12K-1/16W J	a	b	c	d	e	f
SUPER BASS	O	R 0403	88-108-123-080	C-RES,U 12K-1/16W J	a	b	c	d	e	f
SUPER BASS	O	S 0401	87-A92-137-010	C-SW,SL 1-1-2 SSSS8-S501	a	b	c	d	e	f

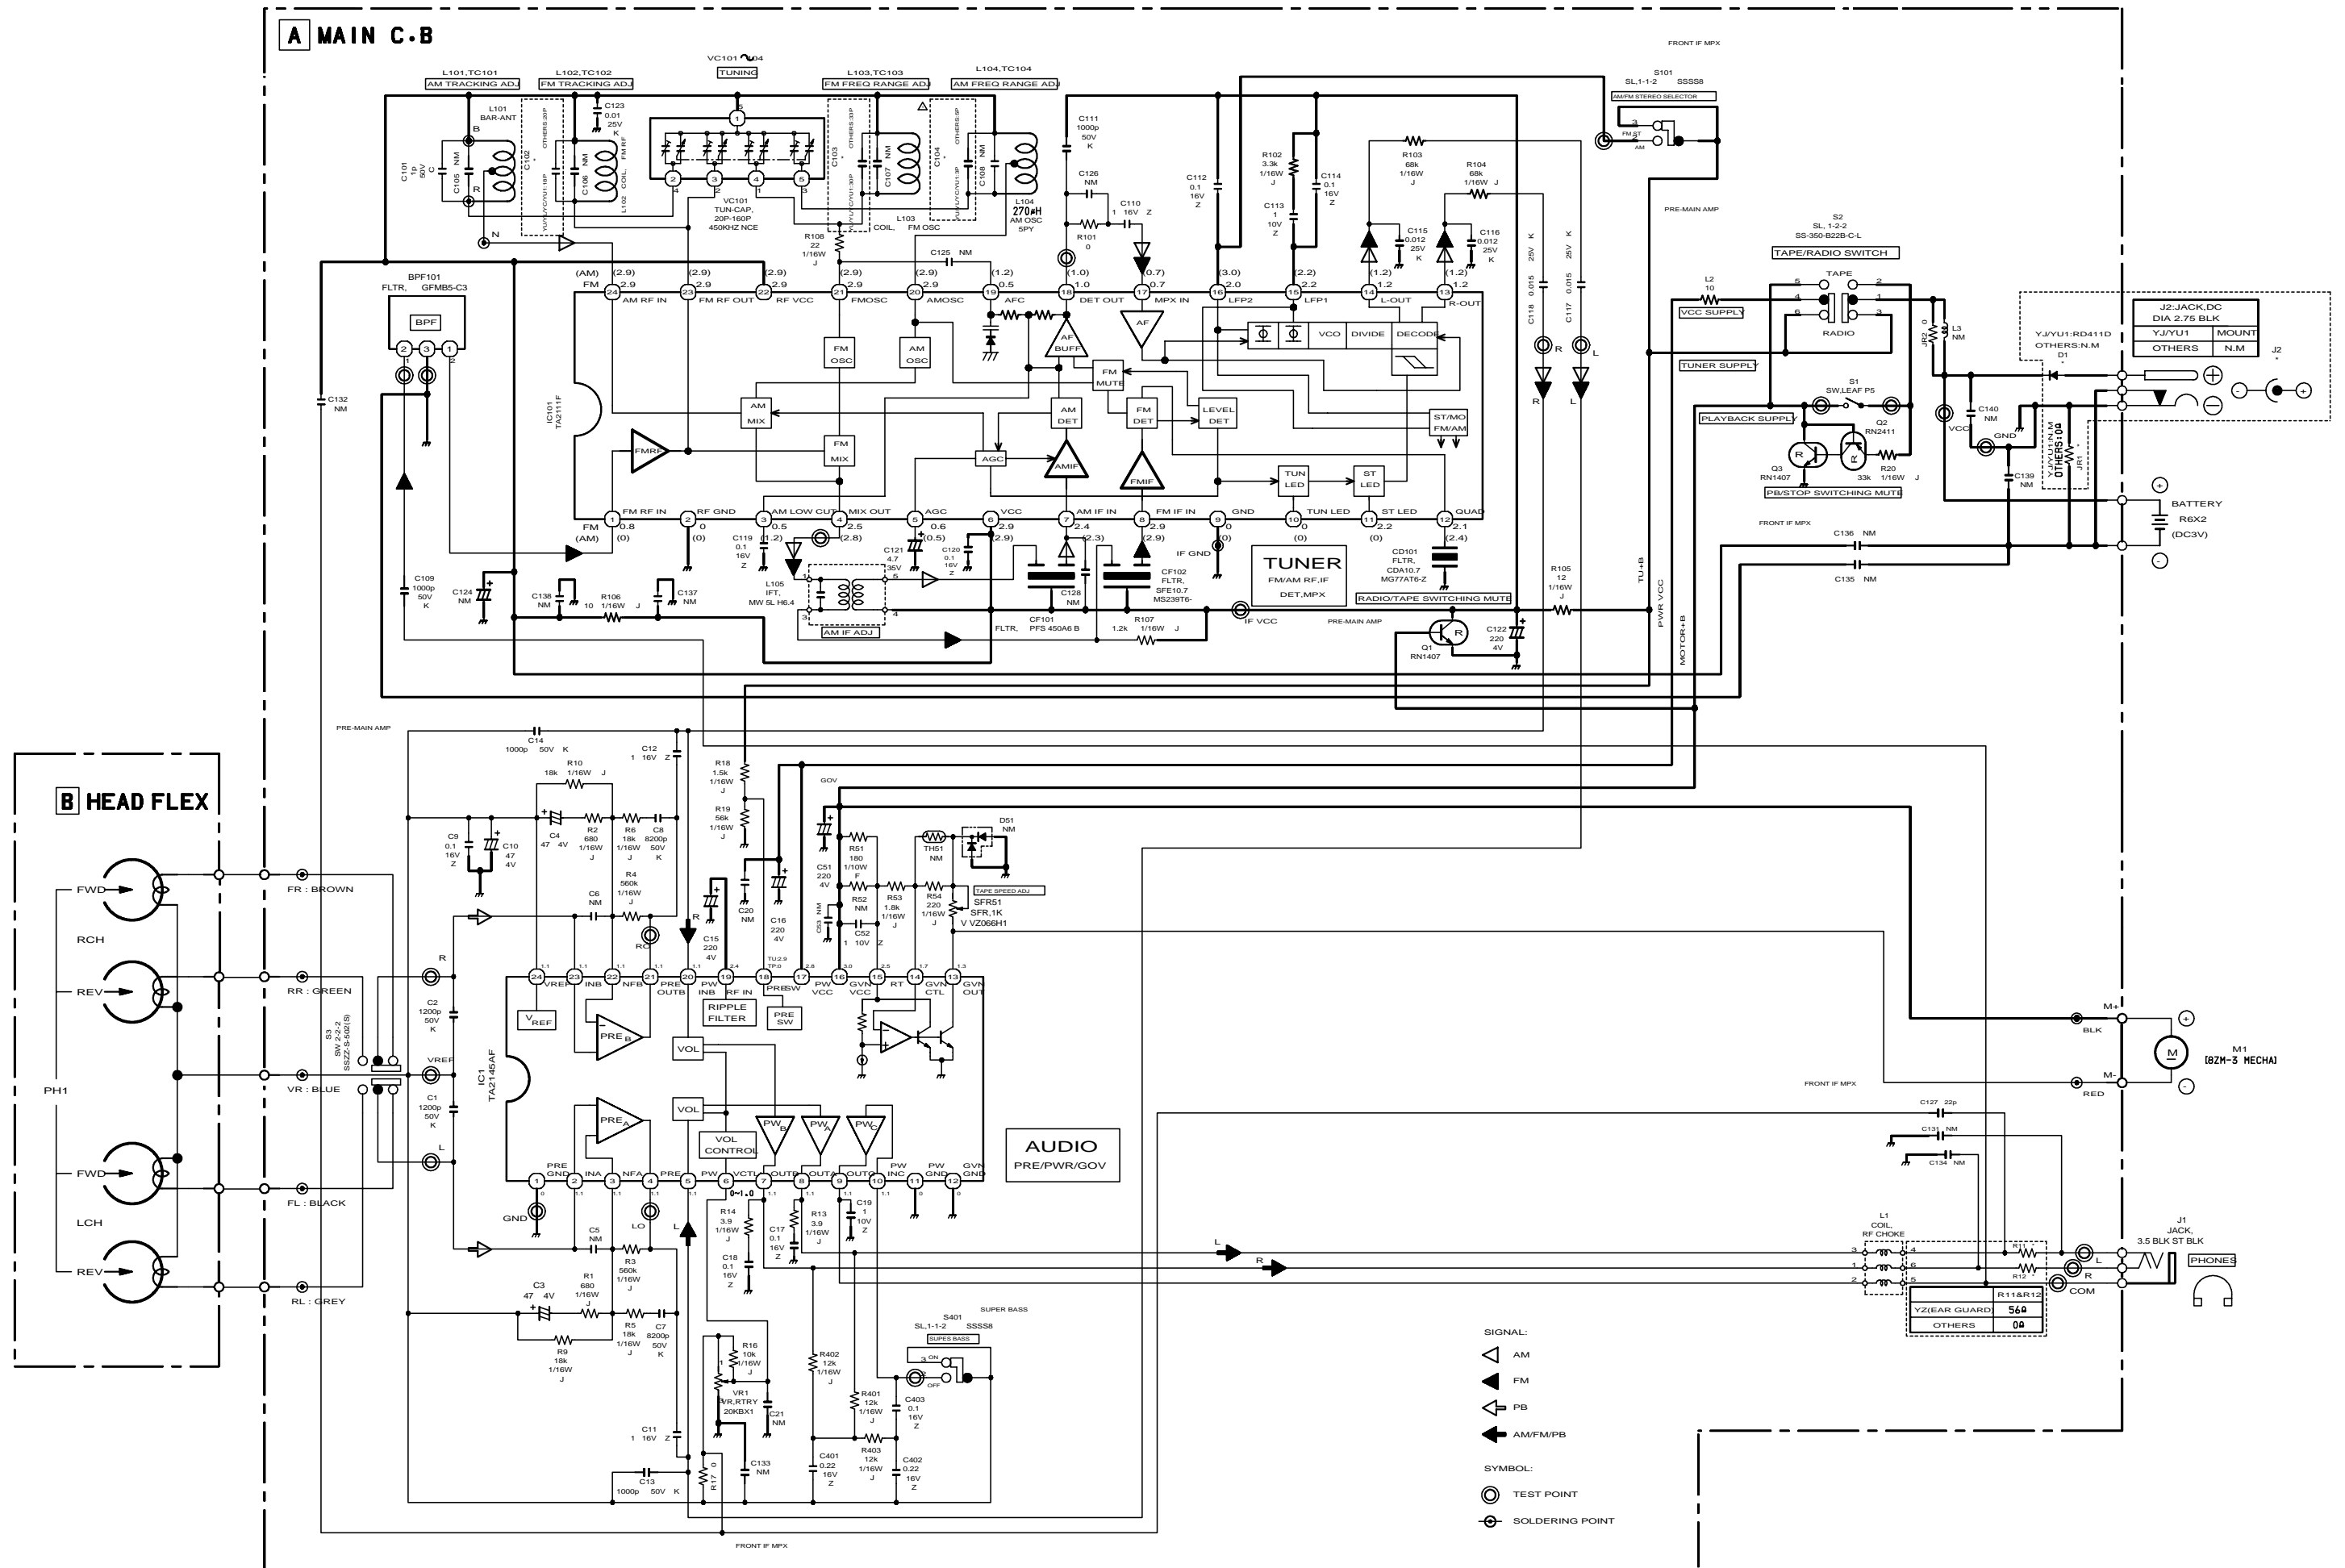

- SIGNAL:**
- ▲ AM
 - ▲ FM
 - ◀ PB
 - ◀ AM/FM/PB
- SYMBOL:**
- ⊙ TEST POINT
 - ⊕ SOLDERING POINT

MECHANICAL PARTS LIST -1/1

! = SAFETY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.
 However, please note that not all components will be available as spare parts for after-sales service.
 Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
 Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

UNIT-NAME	! C	REF-NO	PARTS-NO	PARTS-NAME	SUFFIX&MODEL					
					HS-TA425 YUBSC	HS-TA481 YULBWTC	HS-TA425 YL1SC	HS-TA425 YJ1SC	HS-TA425 YZ1SC	HS-TA425 YCB2SC
O MC1001		8A-HRH-002-110	LID, BATT	a	.	c	d	e	f	
O MC1002		8B-HRC-001-010	LID, CASS	a	.	c	d	.	.	
O MC1003		8B-HRC-001-110	LID, CASS	f	
O MC1004		8B-HRC-010-010	LID, CASS EGSS	e	.	
O MC1005		8C-HRH-002-010	PANEL, FRONT	.	.	.	d	e	.	
O MC1006		8C-HRH-005-010	POINTER, TUN	a	b	c	d	e	f	
O MC1007		8C-HRH-011-010	PANEL, FRONT YU	a	.	c	.	.	f	
O MC1008		8C-HRH-012-110	LID, CASS TRP	.	b	
O MC1009		8C-HRH-015-010	PANEL, FRONT TRP	.	b	
O MC1010		8C-HRH-018-010	LID, BATT TRP	.	b	
O MC1011		8C-HRH-001-110	CABI, FRONT	a	.	c	.	.	f	
O MC1012		8C-HRH-006-110	CABI, FRONT DC	.	.	.	d	.	.	
O MC1013		8C-HRH-010-110	CABI, FRONT YZ	e	.	
O MC1014		8C-HRH-014-010	CABI, FRONT TRP DC	.	b	
O MC1015		8C-HRH-003-010	KNOB, RTRY S-BASS	a	.	c	d	e	f	
O MC1016		8C-HRH-004-010	KNOB, SL BAND	X a	.	c	d	e	f	
O MC1017		8C-HRH-016-010	KNOB, RTRY S-BASS TRP	.	b	
O MC1018		8C-HRH-017-010	KNOB, SL BAND WHT	.	b	
O MC1019		8Z-HRG-007-010	KNOB, RTRY TUN SIL	a	b	c	d	e	f	
O MC1020		8A-HRH-204-010	GEAR, TUNING	a	b	c	d	e	f	
O MC1021		8A-HRH-205-010	BAT-CONTACT, (-)	a	b	c	d	e	f	
O MC1022		8A-HRH-206-010	BAT-CONTACT, (+)	a	b	c	d	e	f	
X MC1023		8A-HRH-599-010	SH, 12-4-0.1 W/ADH	a	b	c	d	e	f	
O MC1024		8B-HRC-205-010	SPR-T, CLICK	a	b	c	d	e	f	
X MC1025		8C-HRH-203-010	CUSH-R, 4.3-4.3-3.95	a	b	c	d	e	f	
X MC1026		8Z-HRB-219-010	SH, BATT	a	b	c	d	e	f	
X MC1027		8Z-HRB-225-010	CUSH, BATT	a	b	c	d	e	f	
O MC1028		8A-HRH-201-010	HLDR, BAR-ANT	a	b	c	d	e	f	
X MC1029		8A-HRH-207-010	SPACER, PCB	a	b	c	d	e	f	
O MC1030		8C-HRH-201-110	HLDR, POINTER	a	.	c	d	e	f	
O MC1031		8C-HRH-202-010	HLDR, POINTER TRP	.	b	
X MC1032		87-B40-154-010	LBL, BAR-CODE CU	a	b	c	d	e	f	
X MC1033		87-B40-281-010	LBL, BAR-CODE A 35X8	.	.	c	d	e	.	
X MC1034		87-B40-282-010	LBL, BAR-CODE AU 35X8	a	b	.	.	.	f	
X MC1035		8C-HRH-007-010	LBL, SPEC YU	a	.	c	.	.	f	
X MC1036		8C-HRH-008-010	LBL, SPEC YJ	.	.	.	d	.	.	
X MC1037		8C-HRH-009-010	LBL, SPEC YZ	e	.	
X MC1038		8C-HRH-019-010	LBL, SPEC 481 C	.	b	
O MC1039		87-264-527-310	V+1.7-3.0 CR	a	b	c	d	e	f	
O MC1040		87-B10-048-010	VT2+1.4-3 (3) CR HL	a	b	c	d	e	f	
O MC1041		87-B10-044-010	V+1.7-6.5	a	b	c	d	e	f	
O MC1042		87-B10-196-010	VT2+1.4-4 BLK (3) HL	a	b	c	d	e	f	
O MC1043		8Z-HR8-211-010	S-SCREW, +1.4-8 BLK HL	a	b	c	d	e	f	
X MC1044		M8-8ZM-39R-070	8ZM-3 P5NC	f	
X MC1045		M8-8ZM-39U-040	8ZM-3 YP5NF	a	.	c	d	e	.	
X MC1046		M8-8ZM-39V-040	8ZM-3 YP15NF	.	b	
X MC1047		8C-HRH-601-010	PWB, MAIN 3M	a	b	c	d	e	f	

アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110-8710, JAPAN TEL:03 (3827) 3111

0251431