 
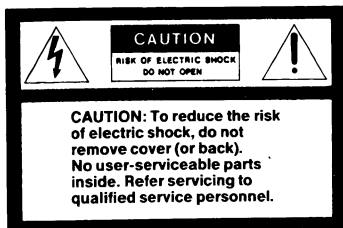 


## Contents

- 3 Where to put the Beomaster
- 4 Connections
- 7 Displayed cues and symbols
- 8 Timer function
- 9 How to use the controls
- 10 Audio/video system setup
- 10 Maintenance

The Beomaster must be placed horizontally on a stable surface. Make sure to put it in a place where ventilation cannot be impeded. Avoid placing it in direct sunlight or near radiators or other sources of heat.



**WARNING:** To prevent fire or electric shock, do not expose this appliance to rain or moisture.



This symbol indicates that a dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

See *Beosystem 7000 user's guide* for remote control operation.

 
## Connections

Connect loudspeakers, antennae, and the other units in the Beosystem (if any) to the Beomaster **before** connecting it to the mains.

To gain access to the sockets, lift up the hinged grille at the rear.


The sockets marked **POWER LINK 1** and **POWER LINK 2** are for connecting active loudspeakers with the Power Link facility, for example the Beolab Penta.

Please refer to the loudspeaker manual for further details about how to set up the loudspeakers ready for use.

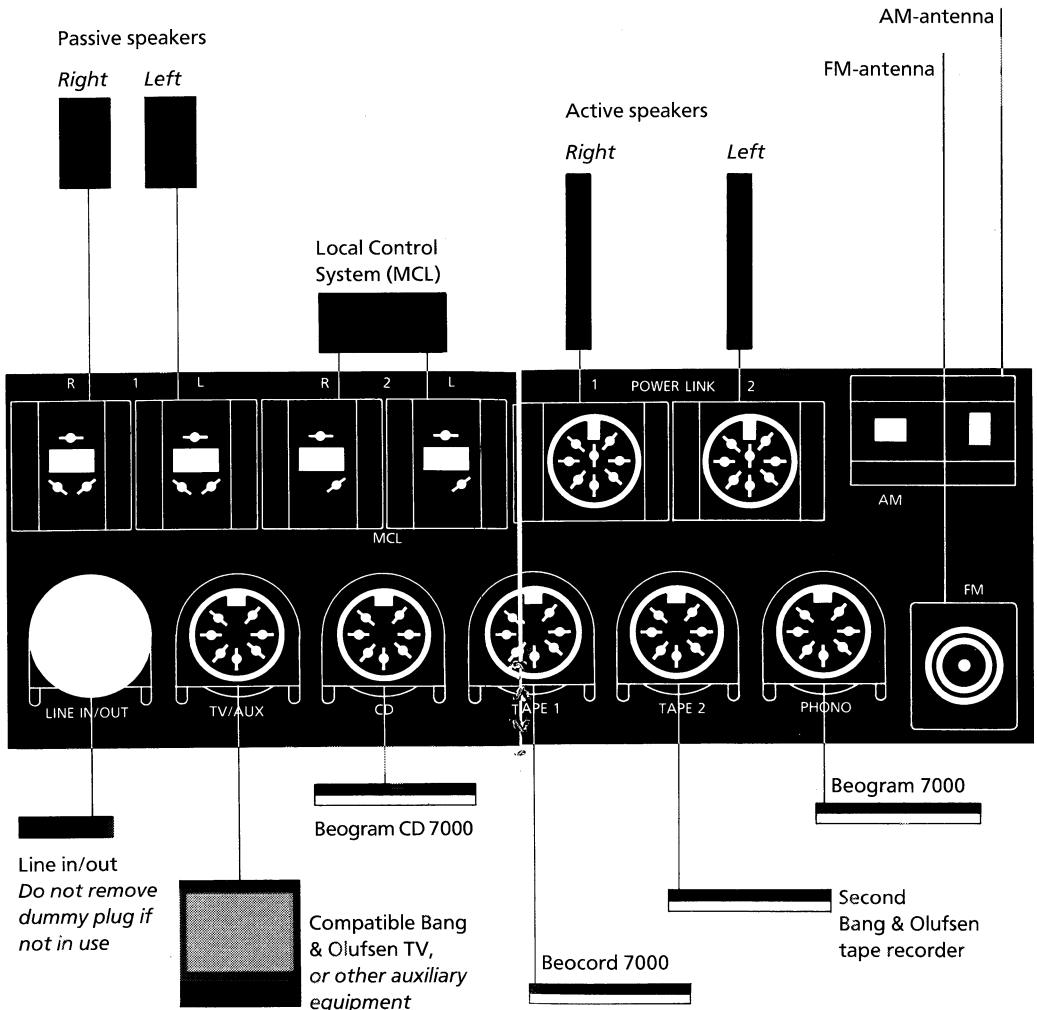

## Connecting headphones

 The tiny socket on the front of the Beomaster is for headphones, e.g. the Bang & Olufsen Form 1 or Form 2 headphones.

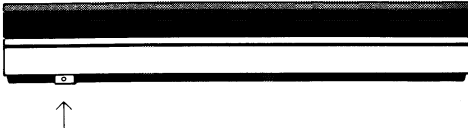


## Displayed cues and symbols

The cues and symbols shown will not be displayed at the same time

- Speakers cut out during programmed play
- Loudness mode indicator
- Automatic Fine Tuning indicator

Radio program number, or unprogrammed FM or AM station (A or F)

 - Bass adjustment in progress
- Treble adjustment in progress
- Source indicators

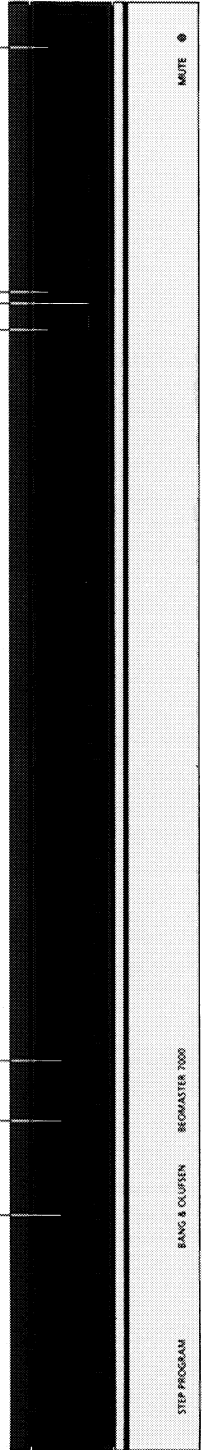

## “Timer” function

If you program the system to play at a specific time, the speakers will be cut in.

You can cut out the speakers, if you wish, so that when the Beosystem starts playing at the specified time, the speakers will be muted.

*Note: This function does not apply to any speakers connected to the SPEAKERS 2 (MCL) sockets.*

While keeping the right-hand side of the panel depressed, tap the left-hand side. The **TIMER OFF** cue now appears, indicating that the **TIMER** function is cancelled.

*To cut in the **TIMER** function again, follow the same procedure.*

*The **TIMER OFF** cue disappears.*

## How to use the controls

*The controls available are on the front panel*

### STEP PROGRAM

A rapid tap switches on the Beomaster on the preset station you were last listening to

By tapping repeatedly you can step through the preset stations

### MUTE ●

A rapid tap switches on the unit you were last listening to at the previously adjusted levels

A prolonged pressure switches the Beosystem to stand-by mode

A rapid tap mutes the loudspeakers

Another rapid tap cuts the speakers in again

## Audio/video system setup

If you have connected a compatible Bang & Olufsen TV to the Beomaster 7000, you can use the Beolink 7000, or for example the Beolink 5000, to remote control both the TV and the Beosystem 7000.

If the Beosystem 7000 and the TV are placed in separate rooms, you will have to reprogram them for this setup (called an option 2 setup) so that you can operate your Beosystem 7000 via the TV and vice versa.

To do so, switch them to the stand-by mode, then press SOUND, 2, STORE to reprogram the Beosystem, and press PICTURE, 2, STORE to reprogram the TV.

*Note: To reprogram the Beosystem and the TV for the factory setup (option 1 setup), use the same programming procedure, but press 1 instead of 2.*

## Maintenance

Wipe off dust with a soft, dry cloth. Use a soft cloth well wrung out in warm water to remove grease stains.

***Do not use alcohol or other solvents to clean any part of the Beomaster 7000 or other units in your Beosystem 7000.***

## International guarantee

This Bang & Olufsen product carries a guarantee against defects in workmanship and materials. The terms of the guarantee apply to the country of purchase but will be met by authorized Bang & Olufsen dealers in other countries. The guarantee period applying to the country of purchase takes priority over guarantee periods applying in other countries, even where differences exist.

In order to obtain service under this guarantee, a certificate stating the following information is required:

- Name of product and type number
- Serial number
- Date of purchase
- Guarantee period
- Dealer's or supplier's signature

## Special note for the UK market

### **IMPORTANT**

*The wires in the mains lead supplied with this apparatus are coloured in accordance with the following code:*

*Blue: Neutral*

*Brown: Live*

*As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your unit, proceed as follows:*

*The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.*

*The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.*

*Ensure that your equipment is connected correctly. If you are in any doubt, consult a qualified electrician.*