
Circuit Board Reference - By Model

Model	Board Number	Board Description
100	F-2597	Connector Circuit Board
<hr/>		
350A	F-1239	
	F-1247	
	F-1248	
	F-1249	
	F-1250	
	F-1324	
<hr/>		
7070	F-2614	Tuner Circuit Board
	F-2615	Muting Circuit Board
	F-2620	Equalizer & Mic Circuit Board
	F-2621	Accessory Switch Circuit Board
	F-2622	Tone Control Circuit Board
	F-2623	Filter Circuit Board
	F-2624	Driver Circuit Board
	F-2625	Power Supply Circuit Board
	F-2626	Power Supply Circuit Board
	F-2627	Illumination Circuit Board
<hr/>		
9090DB	F-1519	FM Pack Circuit Board
	F-2544	Tone Control Circuit Board
	F-2549	FM, AM Tuner Circuit Board
	F-2617	Mic AMP Circuit board
	F-2619	Power Supply RF Circuit board
	F-2624	Driver Circuit Board
	F-2627	Illumination Circuit Board
	F-2653	Equalizer Circuit board
	F-2654	Push Switch Circuit board
	F-2655	Dolby NR Circuit board
	F-2656	Power Supply Circuit board

Circuit Board Reference - By Model

Model	Board Number	Board Description
	F-2657	Power Relay Circuit board
<hr/>		
AU-101		
	F-1302	Main Amp Block
	F-1303	Equalizer/Tone Control Block
<hr/>		
AU-20000		
	F-2515	Meter Driver Board
<hr/>		
AU-222		
	F-1064	Head AMP Circuit Board
	F-1082	Main AMP Circuit Board
	F-1083	Control AMP Circuit Board
<hr/>		
AU-417		
	F-2673	Control AMP Circuit Board
	F-2674	Tone Control Circuit Board
	F-2721	L-CH Driver Circuit Board
	F-2722	R-CH Driver Circuit Board
	F-2723	Equalizer AMP Circuit Board
	F-2911	Input Terminal Circuit Board
	F-2921	Tape Play Circuit Board
	F-3043	Power Supply & Protector Circuit Board
<hr/>		
AU-517		
	F-2667	Tape Play Circuit Board
	F-2670	Pre-Main Switch Circuit Board
	F-2673	Control AMP Circuit Board
	F-2674	Tone Control Circuit Board
	F-2675	Power Supply & Protector Circuit Board
	F-2699	Input Terminal Circuit Board
	F-2721	L-CH Driver Circuit Board
	F-2722	R-CH Driver Circuit Board
	F-2723	Equalizer AMP Circuit Board
<hr/>		

Circuit Board Reference - By Model

Model	Board Number	Board Description
AU-519		
	F-2910	Equalizer circuit board
	F-2912	Pre-main terminal
	F-2913	Tone control amp. circuit board
	F-2914	Tone control circuit board
	F-2921	Tape Play Circuit Board
	F-2926	Left Ch Driver Circuit Board
	F-2927	Right Ch Driver Circuit Board
	F-2989	Input terminal circuit board

AU-717

F-2663	Power Supply & Protector Circuit Board
F-2665	Bass & Treble Volume Circuit Board
F-2666	Turn Over Switch Circuit Board
F-2667	Tape Play Circuit Board
F-2670	Pre-Main Switch Circuit Board
F-2699	Input Terminal Circuit Board
F-2720	Tone Control Circuit Board
F-2721	L-CH Driver Circuit Board
F-2722	R-CH Driver Circuit Board
F-2723	Equalizer AMP Circuit Board

AU-719

F-2926	Left Ch Driver Circuit Board
F-2927	Right Ch Driver Circuit Board
F-3094	
F-3095	Head Amp Circuit Board
F-3096	
F-3098	Control Amp Circuit Board
F-3099	
F-3100	
F-3101	Protector Circuit Board

AU-819

F-2830	Power supply for power amplifier section
--------	------------------------------------------

Circuit Board Reference - By Model

Model	Board Number	Board Description
	F-2831	Power supply for pre-amp.
	F-2832	Loudness,Jump,tone defeat circuit board
	F-2834	Input terminal board
	F-2835	Equalizer amp. circuit board
	F-2839	Driver amp. circuit board
	F-2840	Protector circuit board
	F-2841	Flat amp. circuit board
	F-2842	Tone control board
	F-2995	MC head amp. circuit board
	F-2996	Connection circuit board

AU-919

F-2833	MC head amp. circuit board
F-2835	Equalizer amp. circuit board
F-2839	Driver amp. circuit board
F-2840	Protector circuit board
F-2841	Flat amp. circuit board
F-2843	Turn over circuit board
F-2844	Power supply for pre-amp section
F-2845	Power supply circuit board
F-2928	Rectifier board

AU-999

F-1159	Driver Circuit Board
F-1208	Filter Circuit Board
F-1209	Tone Control Circuit Board
F-1228-1	Head Amp Circuit Board
F-1230	Ripple Filter Circuit Board
F-1231	Plus Ripple Circuit Board
F-1277	Minus Ripple Circuit Board
F-1334	SP Protector Circuit Board

AU-X1

F-2769	Circuit Board
F-2770	Equalizer AMP L-CH Circuit Board

Circuit Board Reference - By Model

Model	Board Number	Board Description
	F-2771	Equalizer AMP R-CH Circuit Board
	F-2772	MC, MM Mother Circuit Board
	F-2773	Muting Circuit Board
	F-2774	Buffer AMP Circuit Board
	F-2775	Driver AMP Circuit Board
	F-2776	Selector Switch Circuit Board
	F-2777	MC, MM Switch Circuit Board
	F-2778	Regulated Power Supply Circuit Board
	F-2779	Circuit Board
	F-2780	Circuit Board
	F-2781	Power Supply & Protector Circuit Board
	F-2819	Flat AMP Circuit Board
	F-2820	Speakers Relay Circuit Board
	F-2917	MC Head AMP L-CH Circuit Board
	F-2918	MC Head AMP R-CH Circuit Board

B-2101

F-4618	Drive AMP Circuit Board
F-4619	Power AMP Circuit Board
F-4620	Protector Circuit Board
F-4622	Peak Power Display Circuit Board
F-4623	Speaker Switch Circuit Board
F-4624	Control Circuit Board
F-4625	Input Terminal Circuit Board
F-4626	Power Supply Circuit Board
F-4627	Power Supply Circuit Board
F-4628	AC Fuse Circuit Board
F-4731	Power Indicator Circuit Board

BA-2000

F-2506	Input Terminal board
F-2514	Meter Amp circuit board
F-2581	
F-2629	Power Supply Circuit board
F-2630	Power Supply Board for Drivers

Circuit Board Reference - By Model

Model	Board Number	Board Description
	F-2631	Level-volume and meter circuit board
	F-2661	Driver Board
<hr/>		
BA-3000		
	F-2507	Driver Board
	F-2508	
	F-2511	Protection Board
	F-2512	
	F-2513	Subsonic Filter Board
	F-2515	Meter Driver Board
<hr/>		
BA-5000		
	F-2515	Meter Driver Board
<hr/>		
C-2101		
	F-4606	Equalizer AMP and Flat AMP Circuit Board
	F-4610	Input Selector Circuit Board
	F-4611	Selector Control Circuit Board
	F-4612	Master Volume Circuit Board
	F-4613	REC Selector Circuit Board
	F-4614	LED Circuit Board
	F-4615	Phones Jack Circuit Board
	F-4616	Rec Selector Indicator Circuit Board
	F-4617	Power Indicator Circuit Board
<hr/>		
G-8000		
	F-2714	Front-End Pack Circuit Board
	F-2794	Input Terminal Circuit Board
	F-2795	Mic AMP Circuit Board
	F-2797	FM Accessory SW Circuit Board
	F-2798	Equalizer AMP Circuit Board
	F-2799	Tone Control Circuit Board
	F-2800	Volume Circuit Board
	F-2802	Tone SW Circuit Board
	F-2806	Driver AMP Circuit Board

Circuit Board Reference - By Model

Model	Board Number	Board Description
	F-2807	Power Supply (R) Circuit Board
	F-2808	Power Supply (L) Circuit Board
	F-2809	AF Power Supply and Protector Circuit Board
	F-2810	RF Power Supply Circuit Board
	F-2811	Indicator Circuit Board
	F-2812	Selector Indicator Circuit Board
	F-2814	Driver Connection Circuit Board
	F-2919	Tuner Circuit Board

G-9000

F-2714	Front-End Pack Circuit Board
F-2794	Input Terminal Circuit Board
F-2795	Mic AMP Circuit Board
F-2796	Equalizer AMP Circuit Board
F-2797	FM Accessory SW Circuit Board
F-2799	Tone Control Circuit Board
F-2800	Volume Circuit Board
F-2801	Tone SW Circuit Board
F-2806	Driver AMP Circuit Board
F-2807	Power Supply (R) Circuit Board
F-2808	Power Supply (L) Circuit Board
F-2809	AF Power Supply and Protector Circuit Board
F-2810	RF Power Supply Circuit Board
F-2811	Indicator Circuit Board
F-2812	Selector Indicator Circuit Board
F-2814	Driver Connection Circuit Board
F-2920	Tuner Circuit Board

QRX-7001

F-1461	Protection Circuit Board
F-1507	FM Tuner Circuit Board
F-1519	FM Pack Circuit Board
F-2086	CD-4 Main Circuit Board
F-2087	QS Matrix Circuit Board
F-2088	QS Phase Control Circuit Board

Circuit Board Reference - By Model

Model	Board Number	Board Description
	F-2090	CD-4 Sub-channel
	F-2423	Filter & Switch Circuit Board
	F-2425	Tone Control Circuit Board
	F-2427	Power Circuit Board
	F-2428	Filter & Power Supply Circuit Board
	F-2431	Power Supply Circuit Board
	F-2436	Driver Circuit Board
	F-2458	Equalizer Circuit Board
<hr/>		
QRX-777		
	F-2475	CD-4 Sub-channel
<hr/>		
SC-1330		
	G-1242	
	G-1243	
	G-1244	
	G-1261	
	G-1265	
<hr/>		
SE-7		
	F-3166	
	F-3167	
<hr/>		
TU-5500		
	F-1506B	Tuner circuit board
	F-1511	Power supply circuit board
<hr/>		
TU-717		
	F-2678	
	F-2679	
	F-2680	
	F-2681	
	F-2703	
	F-2730	
<hr/>		

Circuit Board Reference - By Model

Model	Board Number	Board Description
TU-919	F-2870	Tuner circuit board
	F-2871	Digital Display Circuit board
	F-2872	AM, FM Band Width switch board
	F-2875	Buffer Amp board
	F-2876	Power Supply circuit board
	F-3010	Pre Scaler Circuit Board

TU-999	F-1038-1	AM IF Circuit Board
	F-1103A	FM IM Circuit Board
	F-1137A	Power Circuit Board
	F-1220	AM Meter Circuit Board
	F-1236	Audio AMP Circuit Board
	F-1273	MPX Circuit Board
	F-1332	Muting Circuit Board
