

■ Care and storage of earphones

- The earphones may become dirty through normal use. For the earphone housing, wipe off any dirt with tissue paper. For more delicate parts (such as the sound output holes), dust the dirt away with the supplied cleaning brush. If the sound output holes are clogged, trouble may occur such as the sound becoming quiet, the sound quality changing, or sound no longer coming out. In such cases, please contact a Fostex distributor in your country listed on www.fostex.com.
- When you store the earphones in the mesh pouch, wind the cables in a figure of eight to prevent deformation. If you put a desiccant in the mesh pouch, the earphones will be better maintained.

■ Replacing the cable


Though the signal wire, coating, and connector of the cable have high durability, trouble may occur such as disconnection and noise in accordance with normal use. In such cases, use the dedicated cable provided by us. Replace only when maintenance is needed as frequent replacement is not intended.

Caution

- Use the dedicated cable when you replace the cable. Using a cable which has a different connector type may cause trouble.
- Pinch the cable connector when you replace the cable. If you pull the cable, trouble may occur such as disconnection.


Detach the cable

Grasp and pull the cable connector from the earphone. If it is difficult, pull out while moving the cable from side to side lightly.

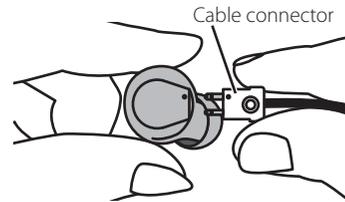

Attach the cable

There are red and blue marks on the cable connector and earphone to indicate the left and right sides. Insert the cable connector into the earphone matching the color and position of the marks.

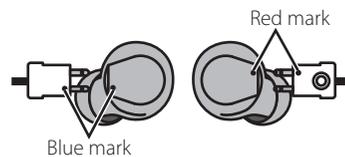

Stereo earphones

TE100

Thank you very much for purchasing a Fostex product.
This manual provides instructions for basic use of the unit.
Read this before using the unit for the first time.

■ Contents


- Earphone × 1
- Ear tip × 4 types
- Cleaning brush × 1
- Mesh pouch × 1
- Pelican case × 1
- Owner's manual (this book) × 1
- Safety sheet × 1

■ Specifications

Type	Sealed hybrid type
Driver	Dynamic + BA
Impedance	17 Ω
Frequency characteristic	10 to 20 kHz
Sensitivity	108 dB
Maximum input	20 mW
Plug	∅ 3.5 mm stereo mini
Cable length	1.2 m
Detachable parts	2 pins
Weight	10 g (excluding cable)

■ Connection


Connects to devices compatible with stereo mini plug.

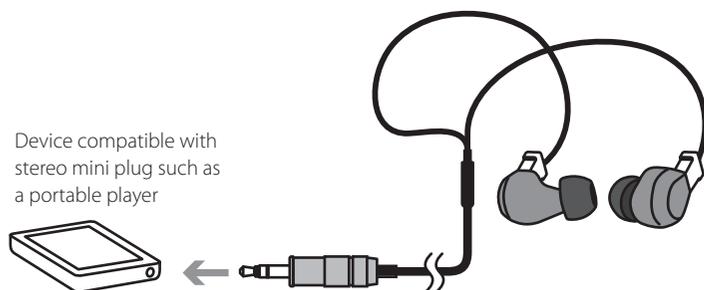

■ Wearing the earphones


1 Confirm the left and right sides.

The side with red marks on the cable connector and earphone is the right side. Furthermore, there is a protrusion on the cable connector of the right side.

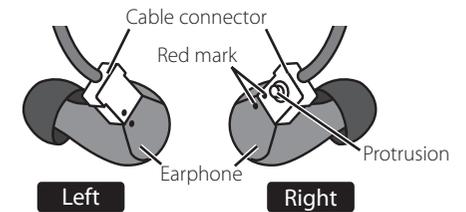


2 Fit the earphones into your ears.

Put the cable over the top of your ear and fit the earphone into your ear.

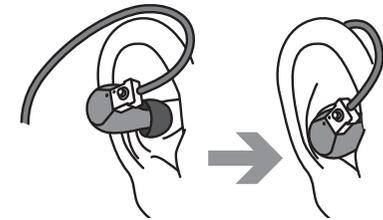

3 Adjust the cable slack.

Slide the cable adjuster at the point where the cables meet, and adjust the slack of left and right cables.

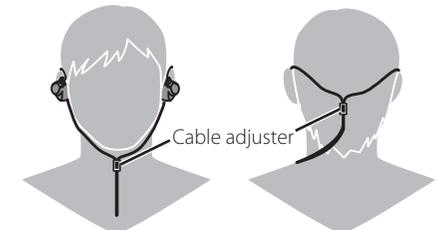

When the cables are at the front, slide the cable adjuster up to under your chin.

When the cables are at the back, slide the cable adjuster up to the back of your head.

■ Mounting the ear tips

If the ear tips do not fit your ears, sound cannot reach your ears properly. To enjoy better sound, fit the ear tips snugly into your ear. There are 4 types of supplied ear tips. Choose the best size for your ears.

⚠ Caution

Mount the ear tips to earphones firmly to prevent them from becoming detached while in use.

Detach the ear tips

Grasp the earphone firmly, and pinch and detach the ear tip with your fingers.

Attach the ear tips

Push the ear tip onto the earphone until it completely covers the head of the earphone.

