


GA-77RET

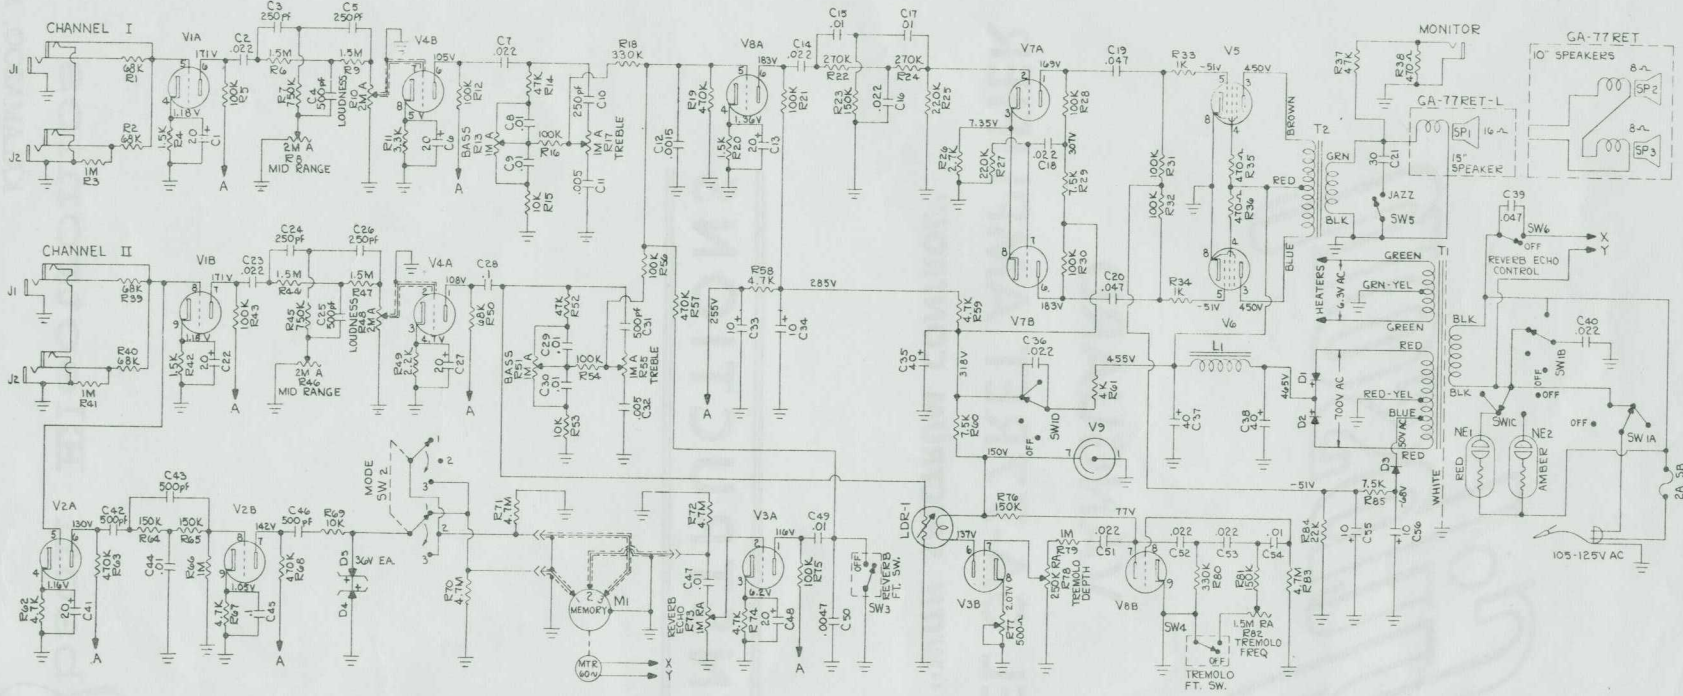

- | | | |
|------|--|-------------|
| T1 | Power Transformer | TF-77FS |
| T2 | Output Transformer | TF-300-01 |
| L1 | Filter Choke | TF-3021H |
| KL1 | Neon Pilot Light (Red) | PL-32R |
| KL2 | Neon Pilot Light (Amber) | PL-32A |
| M1 | Memory | MY-9 |
| SW-1 | Switch - power & pole, & position | SW-78 |
| SW-2 | Switch - mode 2 pole, 3 position | SW-120 |
| SW-3 | Switch - reverse foot SPST | SW-82-03 |
| SW-4 | Switch - tremolo foot SPST | SW-82-03 |
| SW-5 | Switch - jazz (channel #2 treble control) SPST | CBA-811-002 |
| SW-6 | Switch - reverb (reverb control) SPST | CBA-812-071 |

- | | | |
|---------------|---|--------------|
| LDR-1 | Light Dependent Resistor Assembly | RE-LDR-430 |
| D1, D2 | Dual diode 1200 PIV, 250 MA | DI-57 |
| D3 | Diode 200 PIV, 150 MA | DI-69A |
| D4, D5 | Diode Zener, 35V, 400 MW | DI-402 |
| SP1 | Speaker, 15" 16 ohm | S-130F |
| SP2, SP3 | Speakers, 10" 16 ohm | S-20005 |
| R8, R14 | 2 meg audio taper (mid-range and loudness) Control | CBA-811-3702 |
| R15, R16, R17 | 1 meg audio taper (base and treble) Control | CBA-811-3709 |
| R18 | 1 meg audio taper with SPDT switch (treble) Control | CBA-811-4002 |
| R19 | 1 meg reversed audio taper (reverb) Control | CBA-812-071 |
| R20 | 500 ohm wire wound (factory adjusted) Control | CB-233F |
| R21 | 250K reversed audio taper (depth) Control | CBA-811-3704 |
| R22 | 1.5 meg reversed audio (frequency) Control | CBA-811-3711 |

Note: Circuit ground located at input jacks.

