

NOTE:

\* = 5AMP FUSE IN MK 120 or 4AMP FUSE IN MK 60

+ = 1AMP FUSE IN MK 120 or 1/2AMP FUSE IN MK 60

