



Hitachi HA 1100

- NOTES
- 1. S1a,b
 - S2a-d
- POWER SPEAKERS
- ① ON
 - ② OFF
 - 2. A SPEAKERS
 - 3. B SPEAKERS
 - 4. C SPEAKERS
 - 5. A+B SPEAKERS
 - 6. A+C SPEAKERS
- FUNCTION
- ① PHONO-2
 - ② PHONO-1
 - ③ TUNER
 - ④ AUX-1
 - ⑤ AUX-2
 - ⑥ A+C SPEAKERS
- TAPE MONITOR
- ① TAPE-1
 - ② SOURCE
 - ③ TAPE-2
 - ④ TAPE-1-2
 - ⑤ SOURCE
 - ⑥ TAPE-2-1
- TAPE COPY
- ① ON
 - ② OFF
 - ③ 1. -20dB
 - ④ OFF
 - ⑤ 1. -10dB
 - ⑥ OFF
 - ⑦ 1. -5 dB
 - ⑧ OFF
- LOUDNESS
- ① ON
 - ② OFF
 - ③ 3.1L+R
 - ④ L
 - ⑤ R
- GAIN SELECTOR
- ① 1.5kHz
 - ② OFF
 - ③ 3.8kHz
 - ④ OFF
 - ⑤ 1.0kHz
 - ⑥ OFF
 - ⑦ 3.30kHz
 - ⑧ ② DEFEAT
- TONE DEFEAT
- ① ON
 - ② DEFEAT
 - ③ 1.5kHz
 - ④ 2kHz
 - ⑤ 3.15kHz
 - ⑥ 300Hz
 - ⑦ 1.50kHz
 - ⑧ 3.60kHz
- TREBLE TURNOVER
- ① ON
 - ② SP ON
 - ③ 2.SP OFF
 - ④ OFF
- BASS TURNOVER
- ① ON
 - ② OFF
- RELAY THERMAL PROTECTOR
- ① ON
 - ② OFF
- PHONO-2 LEVEL
- ① PHONO-2 LEVEL
 - ② BALANCE
 - ③ LEVEL ATTENUATOR
 - ④ B SPEAKERS LEVEL
 - ⑤ BASS CONTROL
 - ⑥ TREBLE CONTROL
 - ⑦ IDLE CURRENT ADJUST
 - ⑧ DISTORTION ADJUST
3. UNITS
- RESISTANCE : Ω
 - CAPACITANCE : F

TERMINAL GUIDE OF TRANSISTORS

