



- | | | | |
|-------------|----------------------|----------------------|--------------------|
| 1 MIC | INPUT SELECTOR | BAND SELECTOR | MODE SELECTOR |
| 2 TAPE HEAD | S ₁ — SET | S ₂ — SET | S ₃ |
| 3 PHONO-1 | 1 MIC — SET | 1 SHARP — SET | 1 STEREO REV |
| 4 PHONO-2 | 2 TAPE HEAD | 2 BROAD — AM | 2 STEREO NOR — SET |
| 5 AUX -1 | 3 PHONO-1 (LOW Z) | 3 FM — | 3 MONO A |
| 6 AUX -2 | 4 PHONO-2 | 4 FM — MPX | 4 MONO B |
| 7 REC | 5 TUNER | | 5 MONO A+B |
| 8 MONI | 6 AUX | | |