



 
Sound thinking.

www.sansui.co.uk

Sansui

DB-100

DAB/DAB+ Pocket Radio

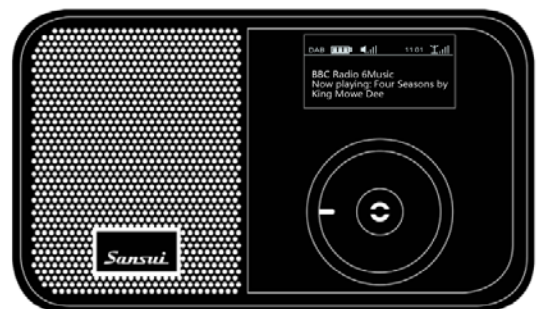

User Guide

Quick Start Guide

Press and hold the **Power Button** for more than 3 seconds to turn on the radio. The green power indicator will flash and then stay illuminated and the start-up screen will appear.

DAB Radio

When the DAB mode is selected for the first time the radio will automatically search for local DAB and DAB + radio stations. Selecting <Station List> will display all the radio stations found and play the first radio station automatically.

FM Radio

Press the **Power Button** once or access the <Main Menu> to switch to FM mode.

Press the **Back Button** to access the FM Main Menu.

Use the **Control Wheel** to navigate to <Auto Program> and then press the **Enter Button**.

Previously stored radio stations will be updated automatically to show those new stations found.

MP3

MP3 files stored on a Flash or SD card can be played back through the radio by inserting a card into the card slot on the bottom of the radio.

Clock & Alarm

You can manually adjust the clock or use DAB and FM to synchronize the clock.

You can set either a DAB or FM broadcast as an alarm. When the alarm sounds, the radio will play the previously selected preset radio station automatically.

Recording Function

It is possible to record an FM or DAB broadcast directly to internal Flash memory or an SD card inserted into the card slot on the bottom of the radio.

User Manual

Brief Introduction	5
Packaging and Specifications	5
Packaging	5
Specifications	6
DAB function	6
FM function	6
MP3	7
Time and Alarm	7
Battery	7
General	7
Button Functions	8
Display Screen	9
Playing Screen	9
Information Screen	10
Query Screen	11
Main Menu	11
Main Menu Structure	11
Mode switching	12
DAB Menu	14
Preset List	14
Station List	14
Local Scan	15
Manual Tune	15
Region	16
DRC	16
Record	16
Sort	17
System Setup	17
Main Menu	17
DAB Mode Operation	17

DB-100

DAB/DAB+ RADIO
Pocket Radio

Sansui

Basic Operation	17
Power on DAB for the First Time	17
Power on DAB after the First Time	17
Select Stations	18
Play Stations	18
Storing Stations	18
Recalling Preset Stations	18
Display Station Information	18
FM Radio Menu Introduction and Operation	19
Preset List	19
Channel List	19
Seek Mode	20
Tune Mode	20
Auto Program	20
Clear All Station	21
Region	21
Scan Setting	21
Audio Setting	22
Record	23
System Setup	23
Main Menu	23
MP3	23
Flash	24
SD Card	24
Audio Setting Menu	24
Play Mode	25
Play Range	25
EQ	26
System Setup	26
Main Menu	26
MP3 User interface for display	27

Downloading files from a PC.....	27
System Setup Menu Introduction and Operation.....	28
Set Power Off Time.....	28
Time Setup.....	29
Display Time & Date.....	29
Set Time & Date.....	29
Alarm.....	29
Backlight Brightness.....	30
Backlight Timeout.....	31
Reset All.....	31
Info.....	31
Charging the Radio.....	31
Using the Antenna.....	32
Safety Warning.....	32

Brief Introduction

The Sansui DB-100 is a digital radio with DAB, DAB +, FM, MP3 and alarm clock function.

DAB stands for Digital Audio Broadcasting and it is the third-generation broadcasting system after AM and FM analogue broadcasting. This new transmission system has great anti - interference performance qualities and can eliminate noise and distortion during the transmission process, automatically correcting errors, which leads it to provide near CD-quality sound.

DAB + is the updated version of the DAB standard and is used in many European countries as well as Australia, Canada, China and South Korea. The DAB + standard is based on HE-AACv2 and can deliver the same high quality sound at a much lower bit rate.

As DAB Radio isn't available everywhere in the world the Sansui DB-100 has an FM radio function allowing analogue FM broadcasts to be received.

In MP3 mode, it can play MP3 music files stored on a Flash or SD card.

Packaging and Specifications

Packaging

Thank you for choosing the Sansui DB-100 DAB radio. Please check the accessories in the box according to the list as below. If there is anything missing please contact your retailer.

- 1. DAB radio device 1 pc

- 2. USB 2.0 charging cable 1 pc
- 3. Antenna 1 pc
- 4. User Manual 1 pc
- 5. Soft Carry Bag 1pc

Specifications

DAB function

- The Sansui DB-100 radio can receive and play all the Band III radio stations using the DAB standard, including DAB+ and the frequency range of DAB band III is 174 928 MHz~239.2 MHz
- Supports Region setting, so the device will search the appropriate band for the radio stations when the user has set up the default Region.
- Supports local searching
- Supports searching by preferred frequency channel
- Supports DRC function
- Supports DLS (Text) function
- Supports recording function, and the default recording format is MP2 when it is in DAB status. The default recording format is AAC when it is in DAB+ status. The capacity is up to the capacity of the Flash or SD card.
- Supports presets, and the maximum number of presets is 30.

FM function

- Also you can use the Sansui DB-100 to receive and play FM radio stations, and the frequency range is 87.5MHz~108MHz, the frequency interval is 50KHz.
- Supports searching and playing strong signal radio stations only.
- Supports playing the radio stations only in Mono mode.
- Supports searching and storing the radio stations automatically, the maximum is 30 radio stations in the Channel list.
- Supports preset function, and the maximum number of presets is 30.

DB-100
DAB/DAB+ RADIO
Pocket Radio

- Supports Tune and Seek mode.
- Supports recording function. The default recording format is MP3, and the capacity is up to the capacity of the Flash or SD card.
- Supports clearing all the stored radio station list, including the preset list and the channel list.
- Supports RDS (PTY,PS,RT,CT)

MP3

- This device can support playing music file from SD card or flash memory.
- Playing mode supports the function for one time, repeat or shuffle function.
- Playing range can be single file, directory or all the files.
- Supports equalizer function.
- Supports play, pause, next, previous function.

Time and Alarm

- The time can be set up manually or off air using DAB or FM.
- The alarm will start with a radio station, and the user can set either a DAB or an FM radio station at the alarm time, so the radio will turn on automatically and play the preset radio station.

Battery

1. Built in 1250mAh Li-polymer battery, providing over 10 hours listening time.
2. Charging time: 5 hours

General

1. Built in speaker: 2W
2. 3.5mm stereo earphone jack
3. Dimension: 73mm*125mm*23.4mm (H*W*D).
4. Weight: 167 grams

Button Functions



Display Screen

 
Playing Screen

There are three modes: DAB, FM, and MP3.

- : Displays the battery charge level.
- : Displays the current volume.
- : Appears when the alarm is set.
- 11:01: Displays the current time.
- : Displays the signal strength.
- BBC Radio 6Music: Display a station name.
- Four Seasons by King Mowe Dee: DLS info (not all stations have DLS info).

In the DAB or FM mode, following a short press of the **Enter Button**, the radio information will be displayed on the screen. (Note: Only FM stations with RDS will have information that can be displayed on the screen).

Example as below

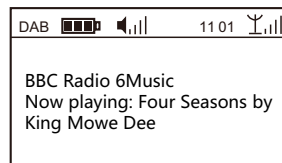


Menu Screen

The menu screen displays four options, with the currently selected option shows '>'. If more than four options are available, turn the Control Wheel up or down to select the others.

Note: Within DAB mode, FM mode or MP3 mode, you can use the <System Setup> and <Main Menu> items rather than selecting the main menu screen

 Example as below

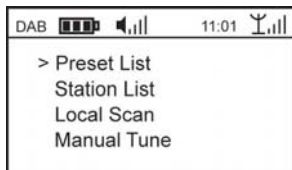

Information Screen

Information screens are used to display messages to the user. They time out after one second.

 
Example as below



Query Screen

A query screen is used to offer the user a choice. Queries are worded so that you can respond with a "yes" (Press Enter Button) or a "no" (Press Back Button).

Example Query Screen

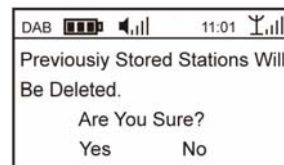

Main Menu

Main Menu Structure

- > DAB
- > FM

- > MP3
- > System Setup

When the radio is powered for the first time, it will show the <Main Menu> after the start-up screen, There are 4 items, <DAB>, <FM>, <MP3>, and <System Setup> Users can select <DAB>, <FM> or <MP3> to select the desired mode.

Power on: Press the **Power Button** for more than 3 seconds to turn on the radio.
 Power off: Press the **Power Button** for more than 3 seconds to turn off the radio.

- 1) When the DAB mode is selected, the radio will play the station that was selected last time. When it is powered on for the first time, it will search for DAB stations automatically, and when the search is finished, the radio will store the list of DAB stations and display the number of received stations. It will play the first station in the list..
- 2) When the FM mode is selected, the radio will display the FM screen, and will play the station that was selected last time. When it is powered on for the first time, the default frequency is 87.5MHz.
- 3) When MP3 mode is selected the radio will display the MP3 Menu.

Mode switching

Under any menu, with a short press of the **Power Button**, it will switch between DAB, FM and MP3 modes.
 Each mode starts with a welcome interface, which will last for 1 second. As shown below:

Access to DAB mode:



Access to FM mode:



Access to MP3 mode:



DAB Menu

DAB Menu structure

- > Preset List
- > Station List
- > Local Scan
- > Manual Tune
- > Region
- > DRC
- > Record
- > Sort
- > System Setup
- > Main Menu

Preset List

Displays a list of preset stations. The preset stations are stored in the memory of the DAB radio. A maximum of 30 preset radio stations can be stored.

Station List

 
Displays a list of received stations, which are stored in the memory of the DAB radio. A maximum of 500 stations can be displayed.

DB-100

DAB/DAB+ RADIO
Pocket Radio


Sansui

Local Scan

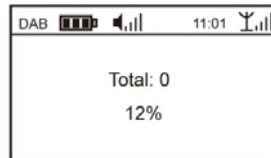

Searches for local stations using the part of band III allocated to the region. When <Local Scan> is selected, the radio will search for radio stations automatically and display the search progress, and when the search is finished, the radio will store the list of DAB stations, and display the number of radio stations found. Then it will play the first station in the list.

 Manual Tune

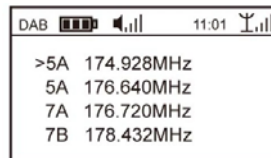

Select a frequency under <Manual Tune>, then press the **Enter Button** to manually search for radio stations on that frequency.

You can step through the list of frequencies, and each time, the radio will search for all stations at that frequency. The process will take a few seconds, and when the

search is finished, the screen will display the number of radio stations found and will play the first station found. If no stations are found, it will display "0". When the search is the radio will display the Playing screen.

Region

You can select the appropriate region from the following: China, Korea, Europe and UK

The different regions use the following frequency bands:

- China Band: 7A-11D 176.720MHz-213.856MHz
- Korea Band: 7A-13C 175.280MHz-214.736MHz
- Europe Band: 5A-13F 174.928MHz-239.200MHz
- UK Band: 11B-12D 218.640MHz-229.072MHz

DRC

Dynamic Range Control. Some broadcasts contain information to allow the radio to compress the dynamic range of the audio to assist listening in noisy conditions. The DRC can be set to three states: high, low, and off. The default is off.

Record

In the DAB mode, you can record your favourite programmes. The recordings can be stored in the internal Flash memory or the SD card.

In the DAB mode, select the <Record> menu; it will offer the storage options, to Flash or SD card if present. If SD Card is selected when an SD card is not present, a warning No SD will appear. Having selected the desired storage option, the display will change to say Preparing, Press the **Enter Button** to start to record. To Pause during the recording, press the **Enter Button**, and to stop recording, press the **Back Button**. If you stop the recording and then press the **Enter Button**, a new recording will start.

Sort

The stations stored in the <Station List> can be sorted, either according to the frequency, or in alphanumeric order, (which is the default setting).

System Setup

Please refer to <System Setup Menu introduction and operation> of this user manual.

Main Menu

Please refer to <Main Menu introduction> of this user manual

DAB Mode Operation

Basic Operation

Power on DAB for the First Time

When using the DAB mode for the first time, or after a Reset, the radio will display the auto-search screen, and when the search is finished, it will show the <Station List> screen, which will display all of the stations found. It will play the first station in the list automatically, and the radio will store all of the stations found.

Power on DAB after the First Time

When using DAB after the first time, it will play the last station that was selected automatically.

Select Stations

Turn to the **Control Wheel** in Playing Screen or Select <Station List> in the DAB menu display the <Station List> menu. Press the **Enter Button** to select the desired radio stations.

Play Stations

Press the **Back Button** to show the DAB menu, turn the **Control Wheel** and press the **Enter Button** to highlight either <Preset List> or <Station List>, then select the desired station and press the **Enter Button** to play it.

Storing Stations

In Playing Screen, pressing the **Enter Button** for more than 3 seconds, will display the <Save Preset> menu. Select any position under this menu and press the **Enter Button**, to store to the selected preset number. The screen will display "Preset Saved", confirming that the station has been stored into the <Preset List> menu.

Recalling Preset Stations

Selecting <Preset List> in the DAB menu, will display the list of Preset stations. Scroll to the desired preset station and press the Enter Button to play it.

Display Station Information

To display the second page of text, where available, momentarily press the Enter Button once. DAB radio also has further information, which can be shown with a further short press of the Enter Button to get information such as "Ensemble Label", "Ensemble Num", "Service Type", "Channels Mode" and "Bit Rate".

DB-100

DAB/DAB+ RADIO
Pocket Radio

Sansui

FM Radio Menu Introduction and Operation

FM Radio Menu Structure:

- > Preset List
- > Channel List
- > Seek Mode
- > Tune Mode
- > Auto Program
- > Clear All List
- > Region
- > Scan Setting
- > Audio Setting
- > Record
- > System Setup
- > Main Menu

Preset List

Displays a list of preset stations. The preset stations are stored in the memory of the radio. Up to 30 FM preset stations can be stored within the radio.

Channel List

"Channel List" is a station search automatically generated by <Auto Program>.

The channel list will be updated each time you select <Auto program>.

Auto program found stations will be stored in the memory of the DAB radio. Up to 30 stations can be stored.

The user can select any station from the list.

Seek Mode

Press **Back Button** to go back to the main menu, select <Seek Mode> and press the **Enter Button**, to search for stations automatically.

Turn the **Control Wheel** to search for FM stations automatically.

Turn the **Control Wheel** clockwise to seek in a frequency increasing direction and anti-clockwise to seek in a frequency decreasing direction.

When the seek function finds a radio station, it will stop and play that station automatically.

Tune Mode

During normal radio playing, press the **Back Button** to enter the FM main menu.

Turn the **Control Wheel** to <Tune mode>, press the **Enter Button** to enter <Tune Mode> for manual tuning thereafter.

Turn the **Control Wheel** and the frequency will change by 0.05MHz per step.

Clockwise to increase the frequency, anticlockwise to decrease the frequency.

Turn the **Control Wheel** until the desired radio stations is located

Auto Program

In the FM menu, turn the **Control Wheel** to <Auto Program> and press the **Enter Button** to enter Auto Program Mode.

The system will search the stations between 87.50MHz ~ 108.00MHz automatically and will show the frequency.

At the same time, it will store the received stations in the Channel List. (30 stations at most).

After the search is completed, it will automatically revert to the Channel List.

The Channel List will show the stored stations, and any previously stored stations will be replaced.

DB-100

DAB/DAB+ RADIO
Pocket Radio

 
Sansui

Clear All Station

To access the <Clear All List> menu during playing, press the **Back Button** to display the FM main menu, and turn the **Control Wheel** to <Clear All List> and press the **Enter Button** to enter the <Clear All List> menu.

In the <Clear All List> menu, you can delete all the stations in the Preset List and Channel List.

Once selected, the screen promptly appears to confirm this action, as below

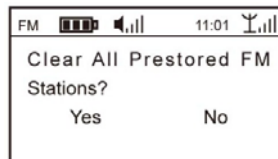

If you confirm and press the **Enter Button**, the radio will clear all the stored stations in the Preset List and Channel List and confirm with 'Clear All', then the radio will go back to the playing screen. To exit without clearing the list, press the **Back Button**

 
Region

In the playing interface, press the **Back Button** to enter the FM main menu, turn and press the **Control Wheel** to <Region>, you can select the corresponding region according to your location. The Region contains: <U.S.A>, <Europe>, <Japan>; press **Enter Button** to save and go back to FM main menu.

Scan Setting


In the playing interface, press **Back Button** and enter the FM main menu, turn the **Control Wheel** to <Scan Setting> and press the **Enter Button**. The screen will show

'Strong Stations Only'? Press **Enter Button**, it will be set to search Strong Stations Only and return to the FM main menu
 Press **Back Button**, it will not select strong stations only but will return to the FM main menu

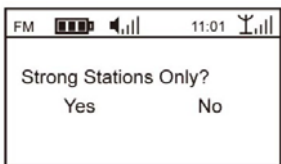

Audio Setting

 In the playing interface, press **Back Button** and enter the **FM** main menu, turn **Control Wheel** to <Audio Setting> and press the **Enter Button**, the interface will show 'Listen in Mono Only'? Press **Enter Button**, it will be set to Listen in Mono only and return to the FM main menu;
 Press **Back Button**, it will logout Mono Settings and return to the FM main menu.

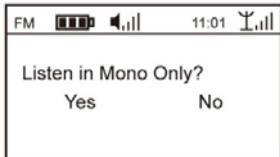

Record

In the FM mode, you can record your favourite programmes. The recordings can be stored in the internal Flash memory or the SD card.

In the FM mode, select the <Record> menu; it will offer the storage options, to Flash or SD card if present. If SD Card is selected when an SD card is not present, a warning No SD will appear. Having selected the desired storage option, the display will change to say 'Preparing', Press the **Enter Button** to start to record. To Pause during the recording, press the **Enter Button**, and to stop recording, press the **Back Button**. If you stop the recording and then press the **Enter Button**, a new recording will start.

System Setup

Please refer to <System Setup Menu introduction and Operation> of this user manual.

Main Menu

Please refer to <Main Menu Introduction> of this user manual

MP3

MP3 Menu Structure:

- > Flash
- > SD Card
- > Audio Setting
- > System Setup

> Main Menu

Flash

In the MP3 main menu, turn **Control Wheel** to <Flash>, press **Enter Button** to view Flash display and the audio files in Flash.

If there are not any audio files or directories, it will display "NO FILE".

If there is an audio file, press the **Enter Button** to play.

 
SD Card

In the MP3 main menu, turn **Control Wheel** to <SD card>, press **Enter Button** to view SD card display and the audio files in SD card.


If there are not any audio files or directories, it will display "NO FILE".

If there is an audio file, press the **Enter Button** to play.

Audio Setting Menu

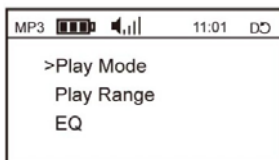


Play Mode

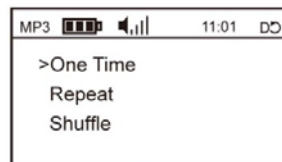 

Turn the **Control Wheel** to <Play mode> and press the Enter Button, then set the play mode to either <One Time>, <Repeat> or <Shuffle>;

Turn the **Control Wheel** to select one of the three modes, and then press the **Enter Button** to save and return to <Play Mode>.

 
Play Range

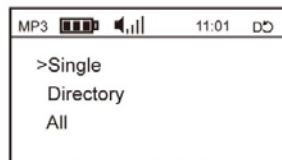

Turn the **Control Wheel** to <Play Range> and press the **Enter Button**, to set the play range as <Single>, <Directory>, <All>;

Turn the **Control Wheel** to select one of the three modes, press the **Enter Button** to save and return to <Play Range>.

 EQ

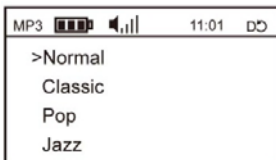

Turn the **Control Wheel** to <EQ>, to set the equalizer as <Normal>, <Classic>, <Pop>, <Jazz>, <Bass> or <Rock>;
Turn the **Control Wheel** to select any one of the six types, then press the **Enter Button** to save and return to <EQ>.

 
System Setup

Please refer to <System Setup Menu Introduction and Operation> of this user manual.

Main Menu

Please refer to <Main Menu Introduction> of this user manual.

MP3 User interface for display

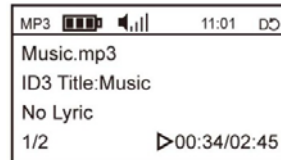


MP3 Playing Screen

From here, turn the **Control Wheel** to select the previous or the next; Momentarily press the **Enter Button** to pause or play.

Downloading files from a PC

 To download files from a PC use the supplied USB cable.
When the radio is powered on, it will show the screen below when it is connected to the PC by the USB 2.0 cable.

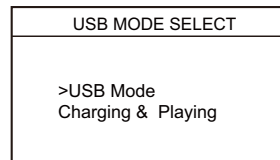

Select <USB Mode> to enter USB mass Storage Mode. You may copy the songs from the PC into the radio and play in MP3 mode. The previous mode will be shown when the USB cable is unplugged.

When you choose <Charging & Playing Mode>, the <USB MODE SELECT> screen will disappear, and the previous mode will be displayed.

 
System Setup Menu Introduction and Operation

System Setup Menu Structure:

- > Set Power Off Time
- > Timer Setup
- > Alarm
- > Brightness
- > Backlight Timeout
- > Reset All
- > Info

Set Power Off Time

You can set the Power Off Time Automatically, to either 60minutes, 45minutes or 30minutes, as shown

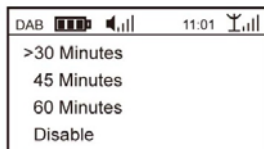

The unit will Power Off automatically after the selected time interval has passed.

Time Setup

Display Time & Date

This menu can display current date, time, week.

Set Time & Date

- > Time Sync

The time can be synchronized by DAB or FM. In DAB or FM mode, selecting this menu will automatically update the current display time.

- > Manual Set

This menu can manually adjust the current time.

The method is to turn the **Control Wheel** to adjust the number of the currently flashing item to set the time.

 
Press the **Enter Button** to skip to the next one, the next one will start flashing. Adjust them in sequence.

When you reach the display of "week", press **Enter Button**, and the settings will be saved and change the currently displayed time.


Press the **Back Button** and go back to the previous menu.

Alarm

The radio includes an alarm clock, and the user can set the alarm time. The alarm also works even when the unit is powered off. It will automatically alarm when it reaches the set time, as shown below:

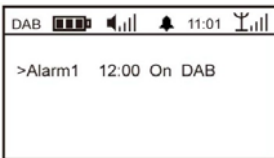

 Press the **Enter Button** to enter the following screen:

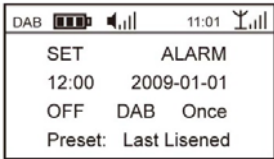

In the Alarm Setting screen, turn the **Control Wheel** left or right to increase or decrease the value of the flashing item; Press **Enter Button** to select the next item which will start flashing. "Preset" item will show Last Lisened. Press the **Enter Button** to show the Preset List, then select an item in the Preset List, and the radio will save this alarm setting and return to the Time Setup screen. A short press of the **Back Button** will select the previous item; a long press of the **Back Button** will automatically exit this screen.

When the alarm time arrives, the radio will automatically turn on and play the alarm radio preset station, and will display the "🔔" symbol flashing. After 30 minutes, it will stop flashing.

Backlight Brightness

Selecting the <Brightness> menu allows you to set the current backlight brightness;

there are 8 levels, 1 – 8. Rotate the Control Wheel to select the brightness values then select the desired value with a short press of the **Enter Button** to save the setting.

A long press of the **Back Button** will not save this setting and will exit this screen.

Backlight Timeout

Selecting the <Backlight Timeout> menu allows you to select how long the backlight remains on after a key press. There are 4 settings, 5s, 10s, 30s and always ON. Rotate the Control Wheel to select the timeout value, and then select the desired value with a short press of the **Enter Button** to save the current setting. A long press of the **Back Button** will not save this setting and will exit this screen.

Reset All

Selecting the <Reset All> menu will ask if you want to continue to reset to the factory default settings. A short press of the **Enter Button** will reset the device to the factory setting. The display will show <System Restart>, after which the device will reboot automatically. After the system reset, the stored DAB, FM stations and DAB radio information will be lost.

Info

Selecting the <Info> menu will enter the software version screen for information. Press any key to exit.

Charging the Radio

The radio can be charged by using the supplied USB 2.0 cable. For best results,

charge when it is off in order to ensure the battery is fully charged. When the radio is off, plugging the USB 2.0 cable in causes the indicator to light Red during charging and extinguishes automatically after charging.

Using the Antenna

If headphones are not being used, be sure to use the supplied external antenna.

Safety Warning

Please read before use

1. If this DAB radio has been moved from a cold place to a warm place, do not turn on the radio for 2-3 hours. (E.g. from a cold car boot to a warm room)

There is a possibility that excessive moisture may damage the DAB radio, in order to avoid damage, please place at room temperature for 2-3 hours before use.

2. Do not remove any fixed covers as this may expose dangerous voltages.

3. Never use your DAB radio if it is damaged in any way. Always place the DAB radio on a flat level surface avoiding anywhere which may be subject to strong vibration.

4. Avoid extremes of temperature, either hot or cold; place your DAB radio well away from heat sources such as radiators or electronic equipment.

5. Don't allow your DAB radio to be exposed to rain, moisture or dust. If any liquid is spilled into your DAB radio, it can cause serious damage.

If you spill any liquid into your DAB radio, please power off the unit immediately.

6. Caution: Don't open any covers and don't repair yourself. Qualified personnel must carry out repair work.

7. Use of headset or earphones with maximum volume for a long period of time may cause hearing loss due to excessive sound pressures.