




1 Check the supplied accessories

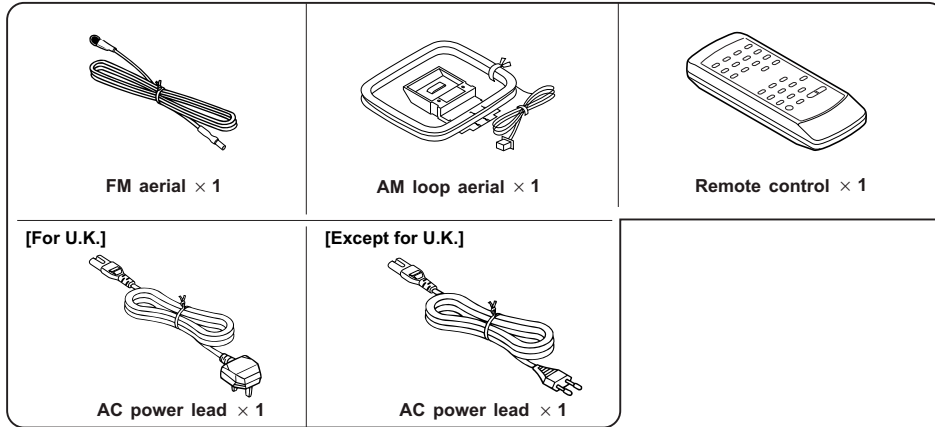


2 Putting batteries into the remote control

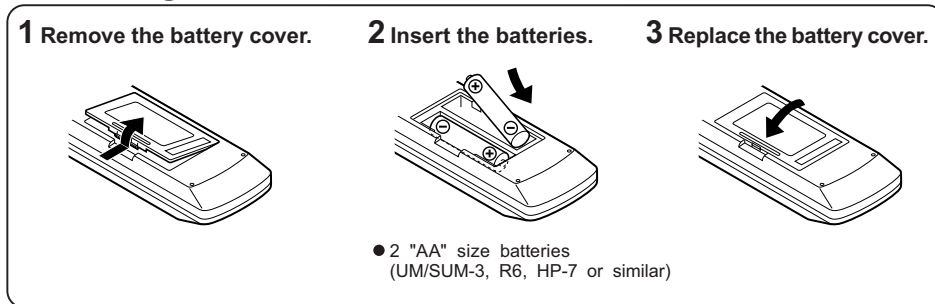



3 Placing the system

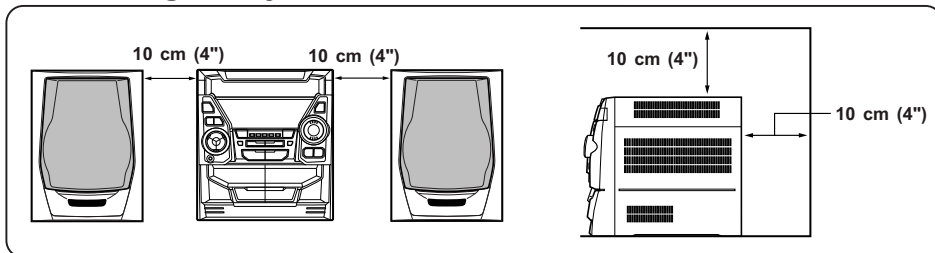

4 Connections

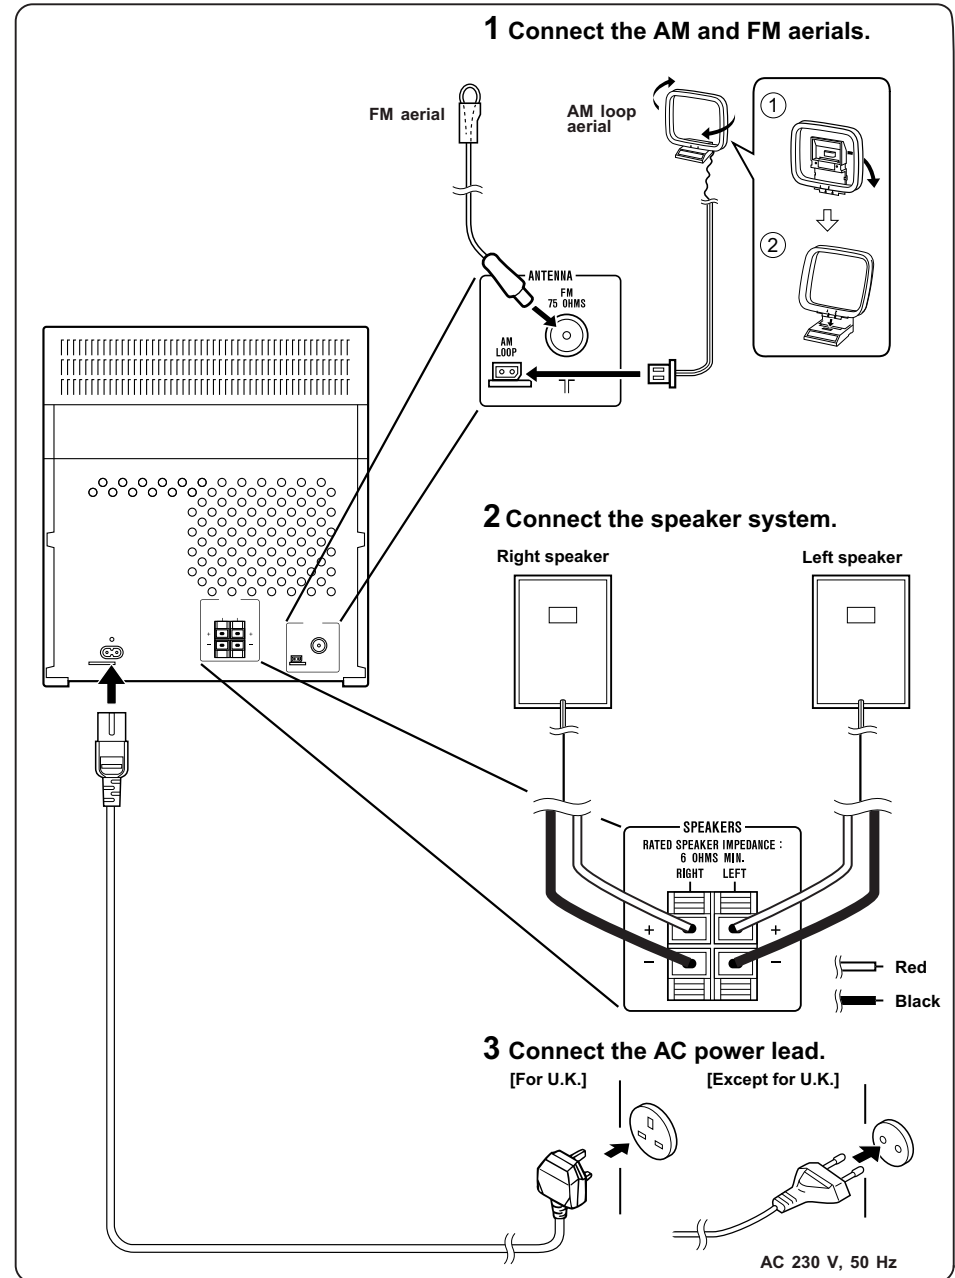


5 Listening to a CD

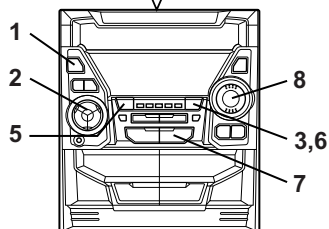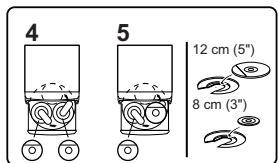



- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the CD button.
- 3 Press the OPEN/CLOSE button to open the disc tray.
- 4 Place the CD(s) on the disc tray, label side up.
- 5 When loading a third disc, press the DISC SKIP button to turn the disc tray, then place the CD in the open position.
- 6 Press the OPEN/CLOSE button to close the disc tray.
- 7 Press the ►/◄ button.
- 8 Adjust the sound volume using the VOLUME buttons.

6 Listening to the radio

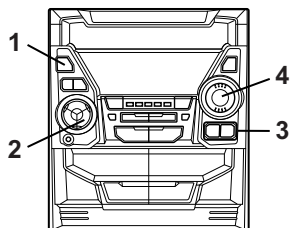



- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the TUNER (BAND) button to select FM ST, FM or AM.
- 3 Press the TUNING/TIME (∨ or ∧) button to tune into the desired station.
- 4 Adjust the sound volume using the VOLUME buttons.

7 Listening to a tape

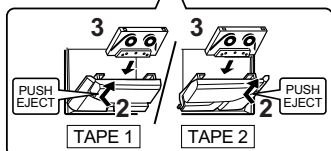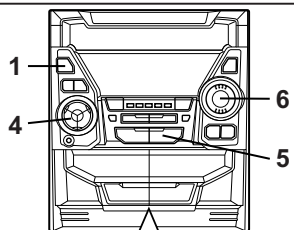


- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Open the cassette door by pushing the area marked "PUSH EJECT".
- 3 Load the cassette into the TAPE 1 or TAPE 2 cassette compartment.
- And then, close the cassette door completely until it is locked.
- 4 Press the TAPE (1 ↔ 2) button to select the TAPE 1 or TAPE 2.
- 5 Press the ►/◄ button to start playback.
- 6 Adjust the sound volume using the VOLUME buttons.

8 Recording from CDs

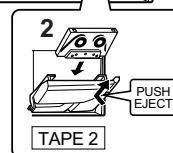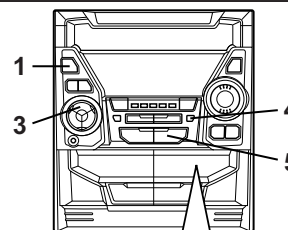

- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Load a cassette into the TAPE 2 cassette compartment.
- 3 Press the CD button and load the desired disc.
- 4 Press the REC PAUSE button.
- 5 Press the ►/◄ button.

● Resetting the microcomputer

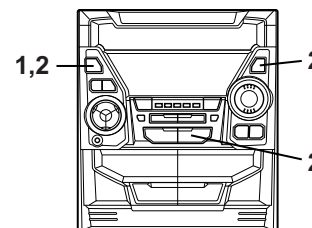

If this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction or the display may not function correctly. If such a problem occurs, do the following:

- 1 Press the ON/STAND-BY button to enter the stand-by mode.
- 2 Whilst pressing down the ►/◄ button and the EQUALIZER/X-BASS/DEMO button, hold down the ON/STAND-BY button for at least 1 second.
- "CLEAR AL" will appear.

Caution:

- The operation explained above will erase all data stored in memory including clock and timer settings, and tuner and CD presets.

● CD pickup cleaning

Clean the dust or stain on the CD pickup lens using a commercial cleaning disc (brush type).

