

PS-V702/V702P

SERVICE MANUAL

AEP Model
PS-V702

E Model
PS-V702/V702P

- PS-V702/V702P are almost the same as model PS-LX40/LX40P (DIAGRAMS, ELECTRICAL PARTS LIST) or PS-V701/V701P (EXPLODED VIEWS), previously produced.
Therefore, see the service manual for the information not contained in this manual.

• **PARTS LIST (The difference between PS-V701/V701P and PS-V702/V702P)**

PS-V701/V701P		PS-V702/V702P	
Page No.	Part No.	Part No.	Description
4	10 4-909-060-01	{ 4-896-553-01 (V702P)	TURN TABLE
		{ A-4604-327-A (V702)	TURN TABLE ASSY
6	12 4-896-506-01	{ 4-896-548-01 (V702P)	CABINET
	4-896-511-01	{ 4-896-561-01 (V702)	CABINET
6	3-750-347-11	3-751-555-11 (V702)	MANUAL, INSTRUCTION
	3-750-347-41	3-751-555-41 (V702)	MANUAL, INSTRUCTION
	*4-896-515-01	{ *4-896-568-01 (V702: E)	INDIVIDUAL CARTON
		{ *4-896-571-01 (V702: AEP)	INDIVIDUAL CARTON
		{ *4-896-573-01 (V702: E, Sanudi Arabia)	INDIVIDUAL CARTON

NOTE:

- Items marked “★” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

STEREO TURNTABLE SYSTEM

SONY®

Sony Corporation
Audio Group

English
90C0460-1
Printed in Japan
© 1990. 3