


Technics TAPE DECK MODEL RS-M14 SCHEMATIC DIAGRAM

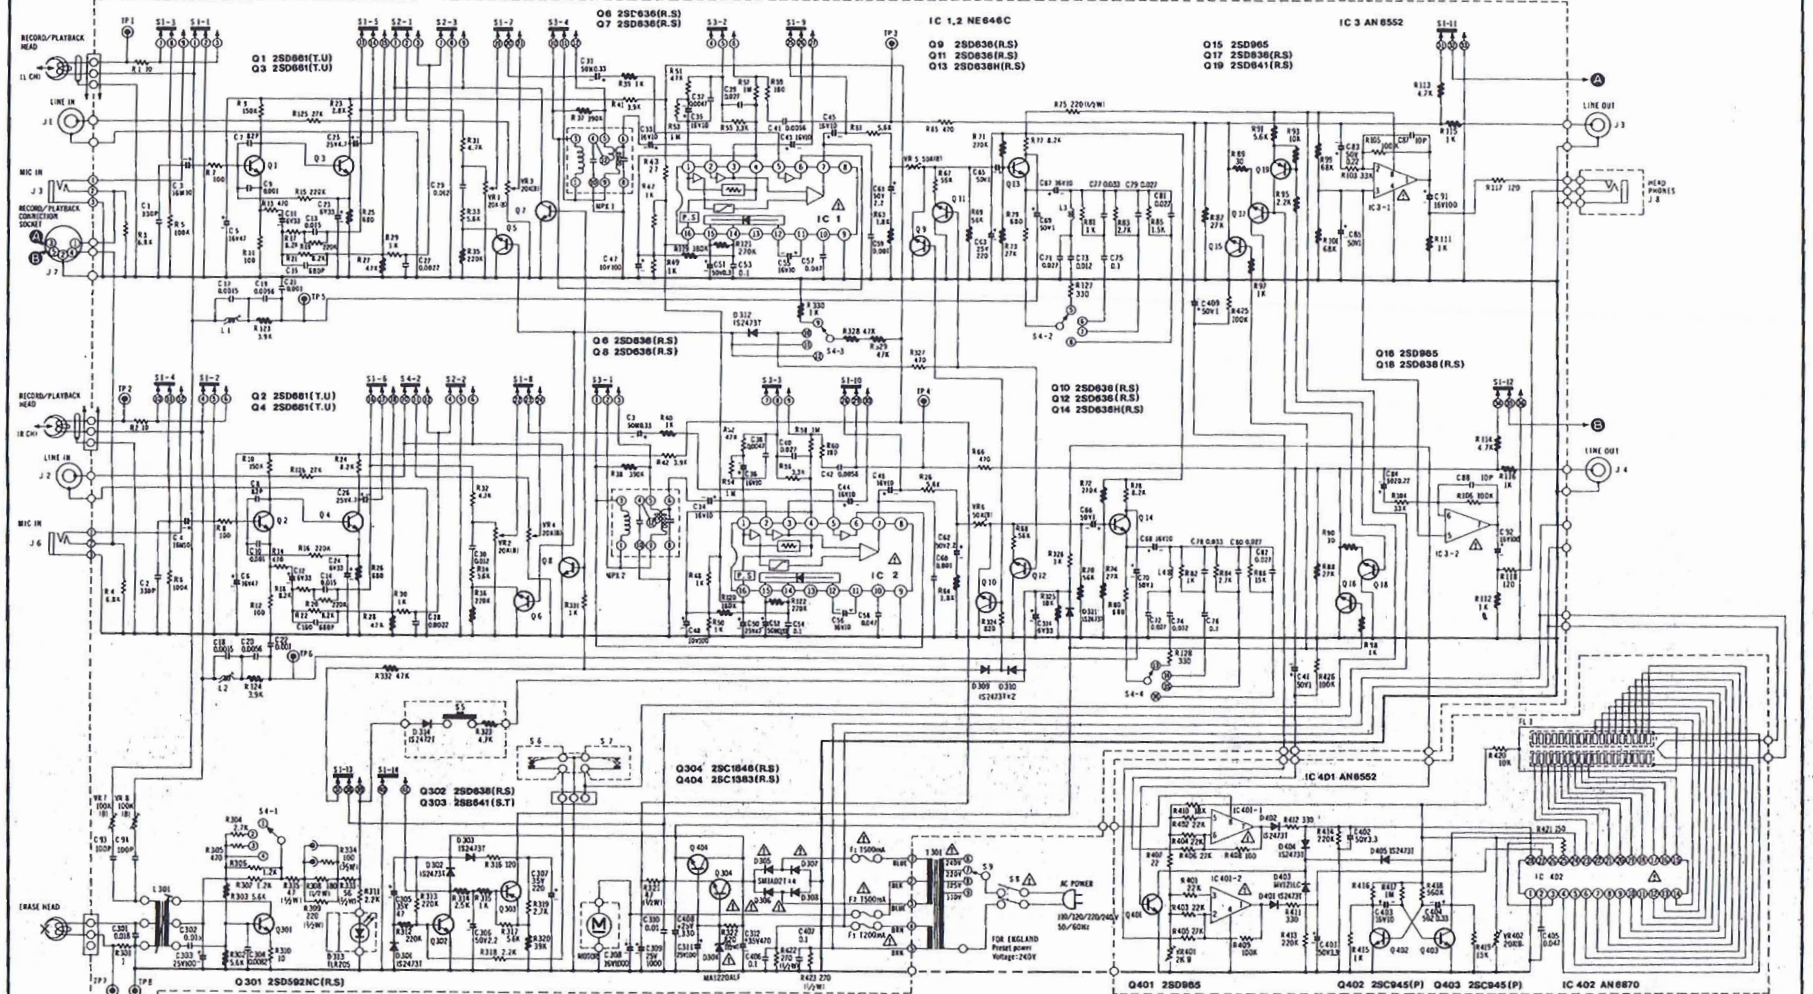

SWITCHES

- 1. S₁ ~ S₁₄ RECORD/PLAYBACK SWITCH (PLAYBACK POSITION)
- 2. S₂ ~ S₂₄ INPUT SELECTOR SWITCH (LINE POSITION)
- 3. S₃ ~ S₃₄ DOLBY SWITCH (OUT POSITION)
- 4. S₄ ~ S₄₄ TAPE SELECTOR SWITCH
(1. Nor 2. Fe-Cr 3. CrO₂ 4. Metal)
- 5. S₅ RECORD MUTING SWITCH (OFF POSITION)
- 6. S₆ PLAY SWITCH (PLAY POSITION)

- 7. S₇ CUE/REVIEW SWITCH
- 8. S₈ POWER SWITCH (OFF POSITION)
- 9. S₉ VOLTAGE SELECTOR SWITCH

△ indicates that only parts specified manufacturer be used for replacement in critical circuits.
 • This schematic diagram is subject to change.