

Technics

by Panasonic

Operating Instructions MODEL SH-11L1


We want to thank you for selecting the SH-11L1 STROBO ILLUMINATOR, as the accessory for the SL-1100 DIRECT DRIVE PLAYER SYSTEM.

- ① Remove the felt on the AC OUTLET, and insert the STROBO ILLUMINATOR in it. (See operating instructions of the SL-1100.)
- ② Push the button of the STROBO ILLUMINATOR, then the neon lamp will be lighted.
- ③ Adjust the turntable speed by the "variable pitch controls" until the strobo marks are stationary, when the turntable platter rotates.

(CAUTION)

This one is designed and manufactured exclusively for the SL-1100 DIRECT DRIVE PLAYER SYSTEM, therefore don't insert it in the other AC OUTLET.

Power supply -- AC 120V,
60Hz, 2W

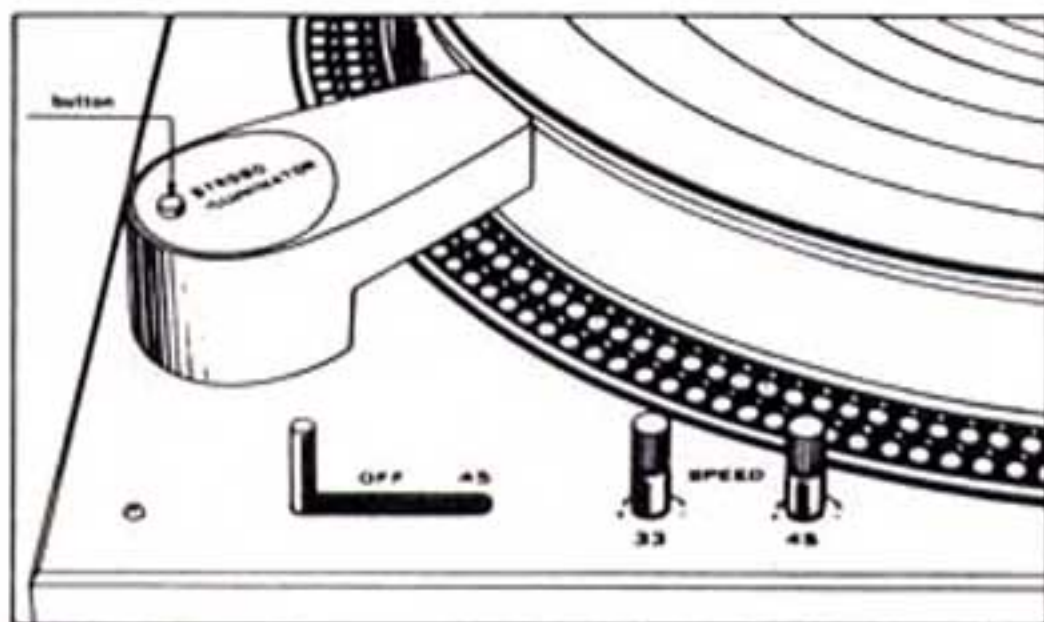

Matsushita Electric Corp. of America
1 Panasonic Way, Secaucus, New Jersey, 07094.
Matsushita Electric of Hawaii, Inc.
320 Waiakamilo Road, Honolulu, Hawaii 96817
Matsushita Electric of Canada Ltd.
40 Ronson Drive, Rexdale, Ont, M9W 1B5 Canada
Printed in Japan

S1272D2 SFNU111M01