



TELE-SONIC 0101800

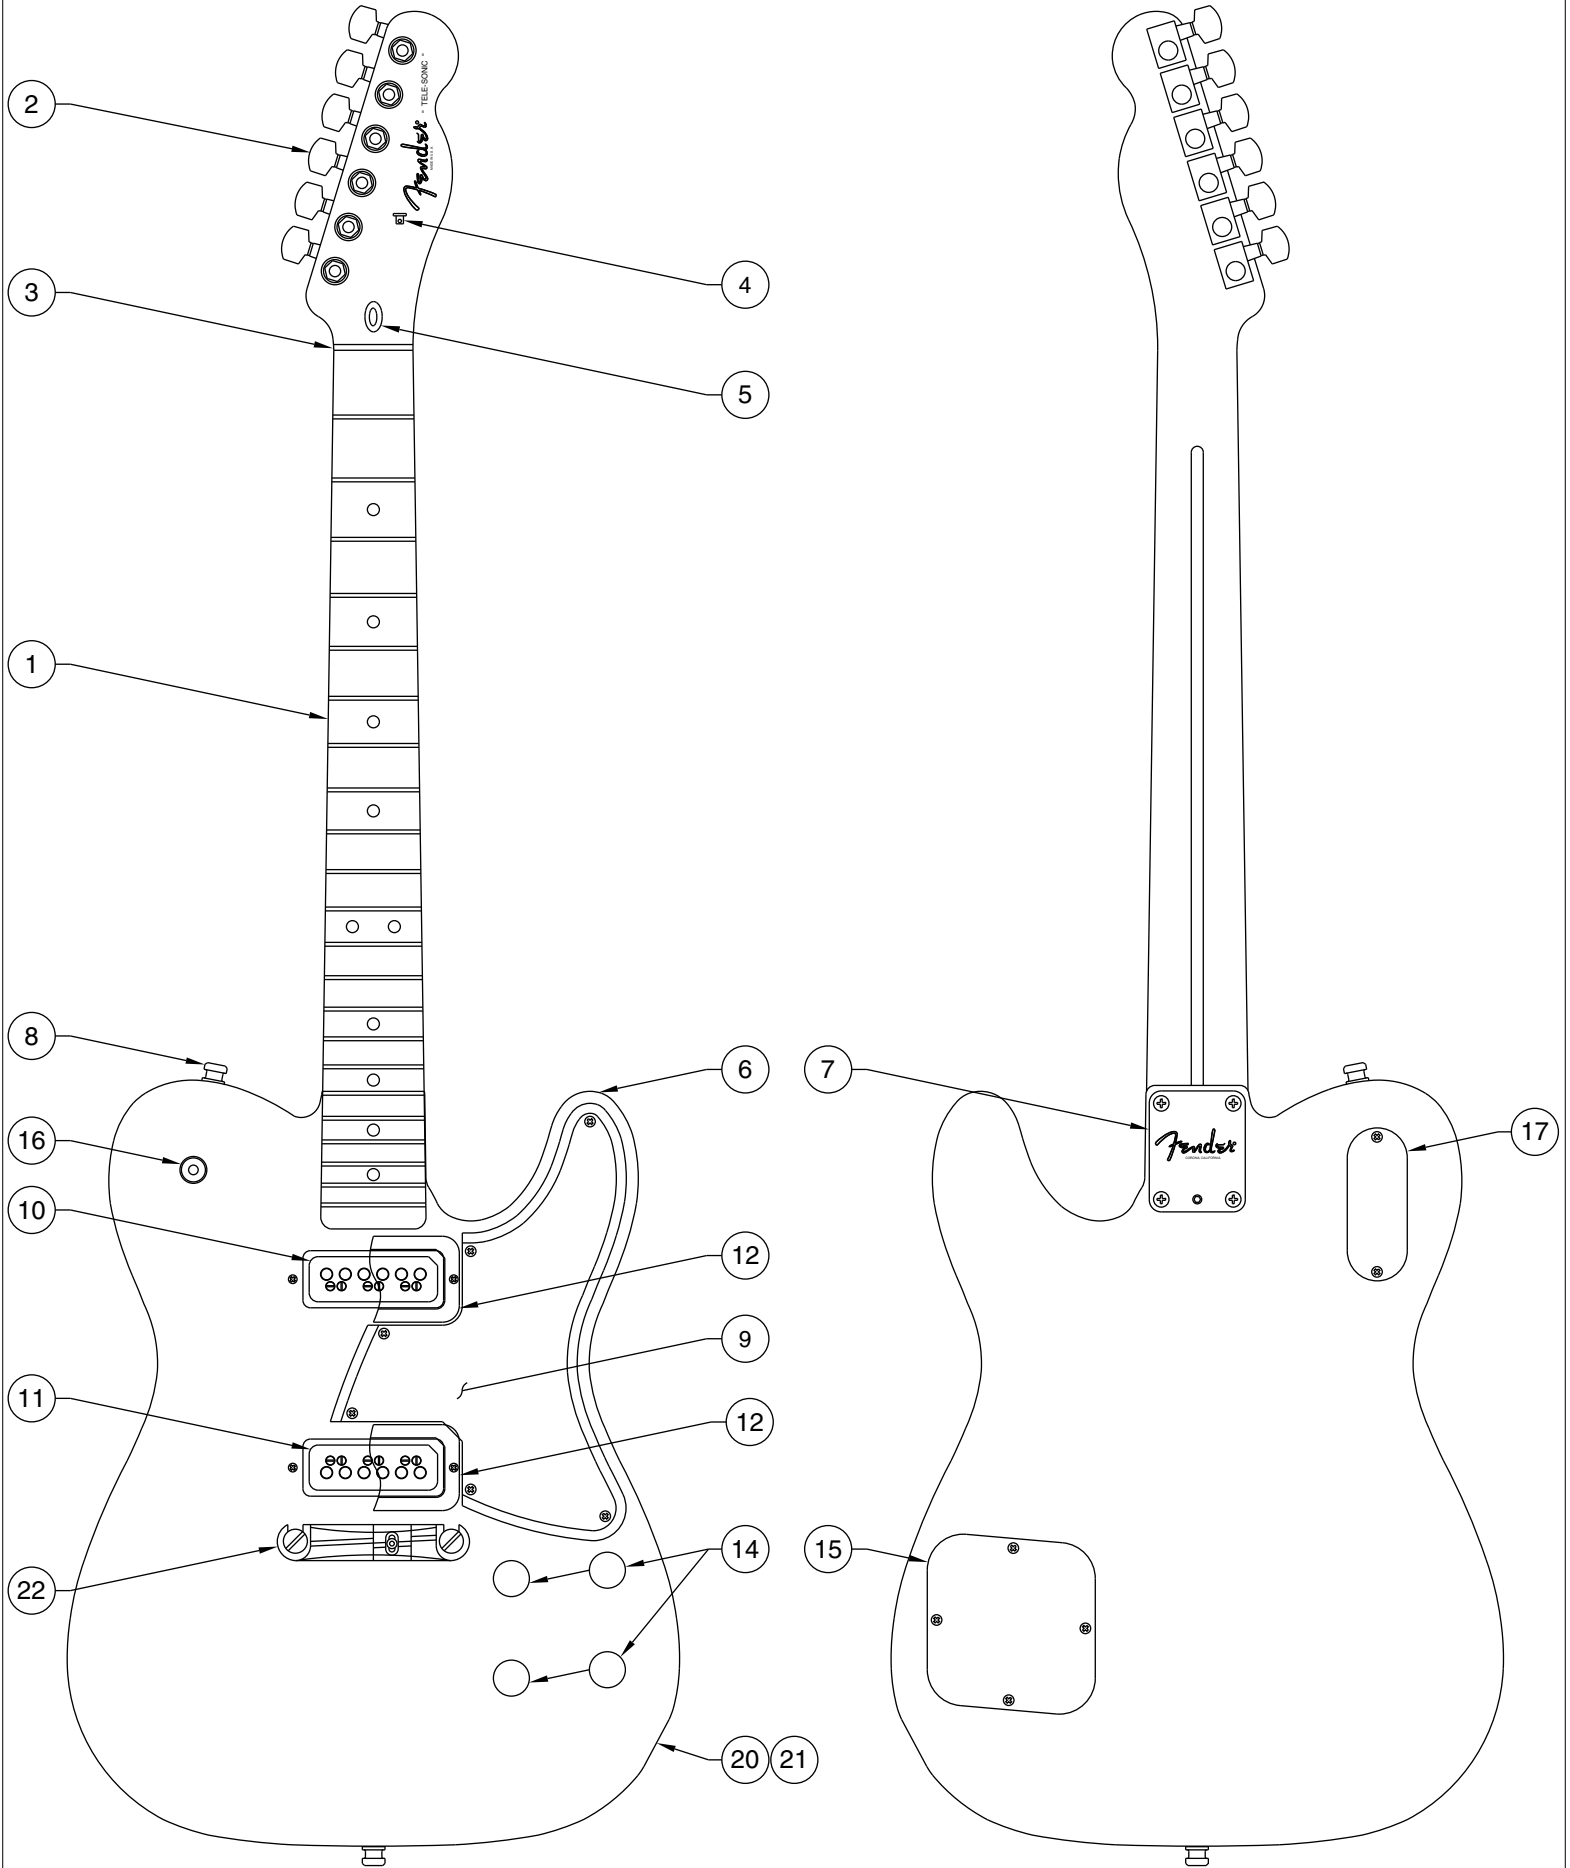

**TELE-SONIC 0101800
WIRING DIAGRAM**

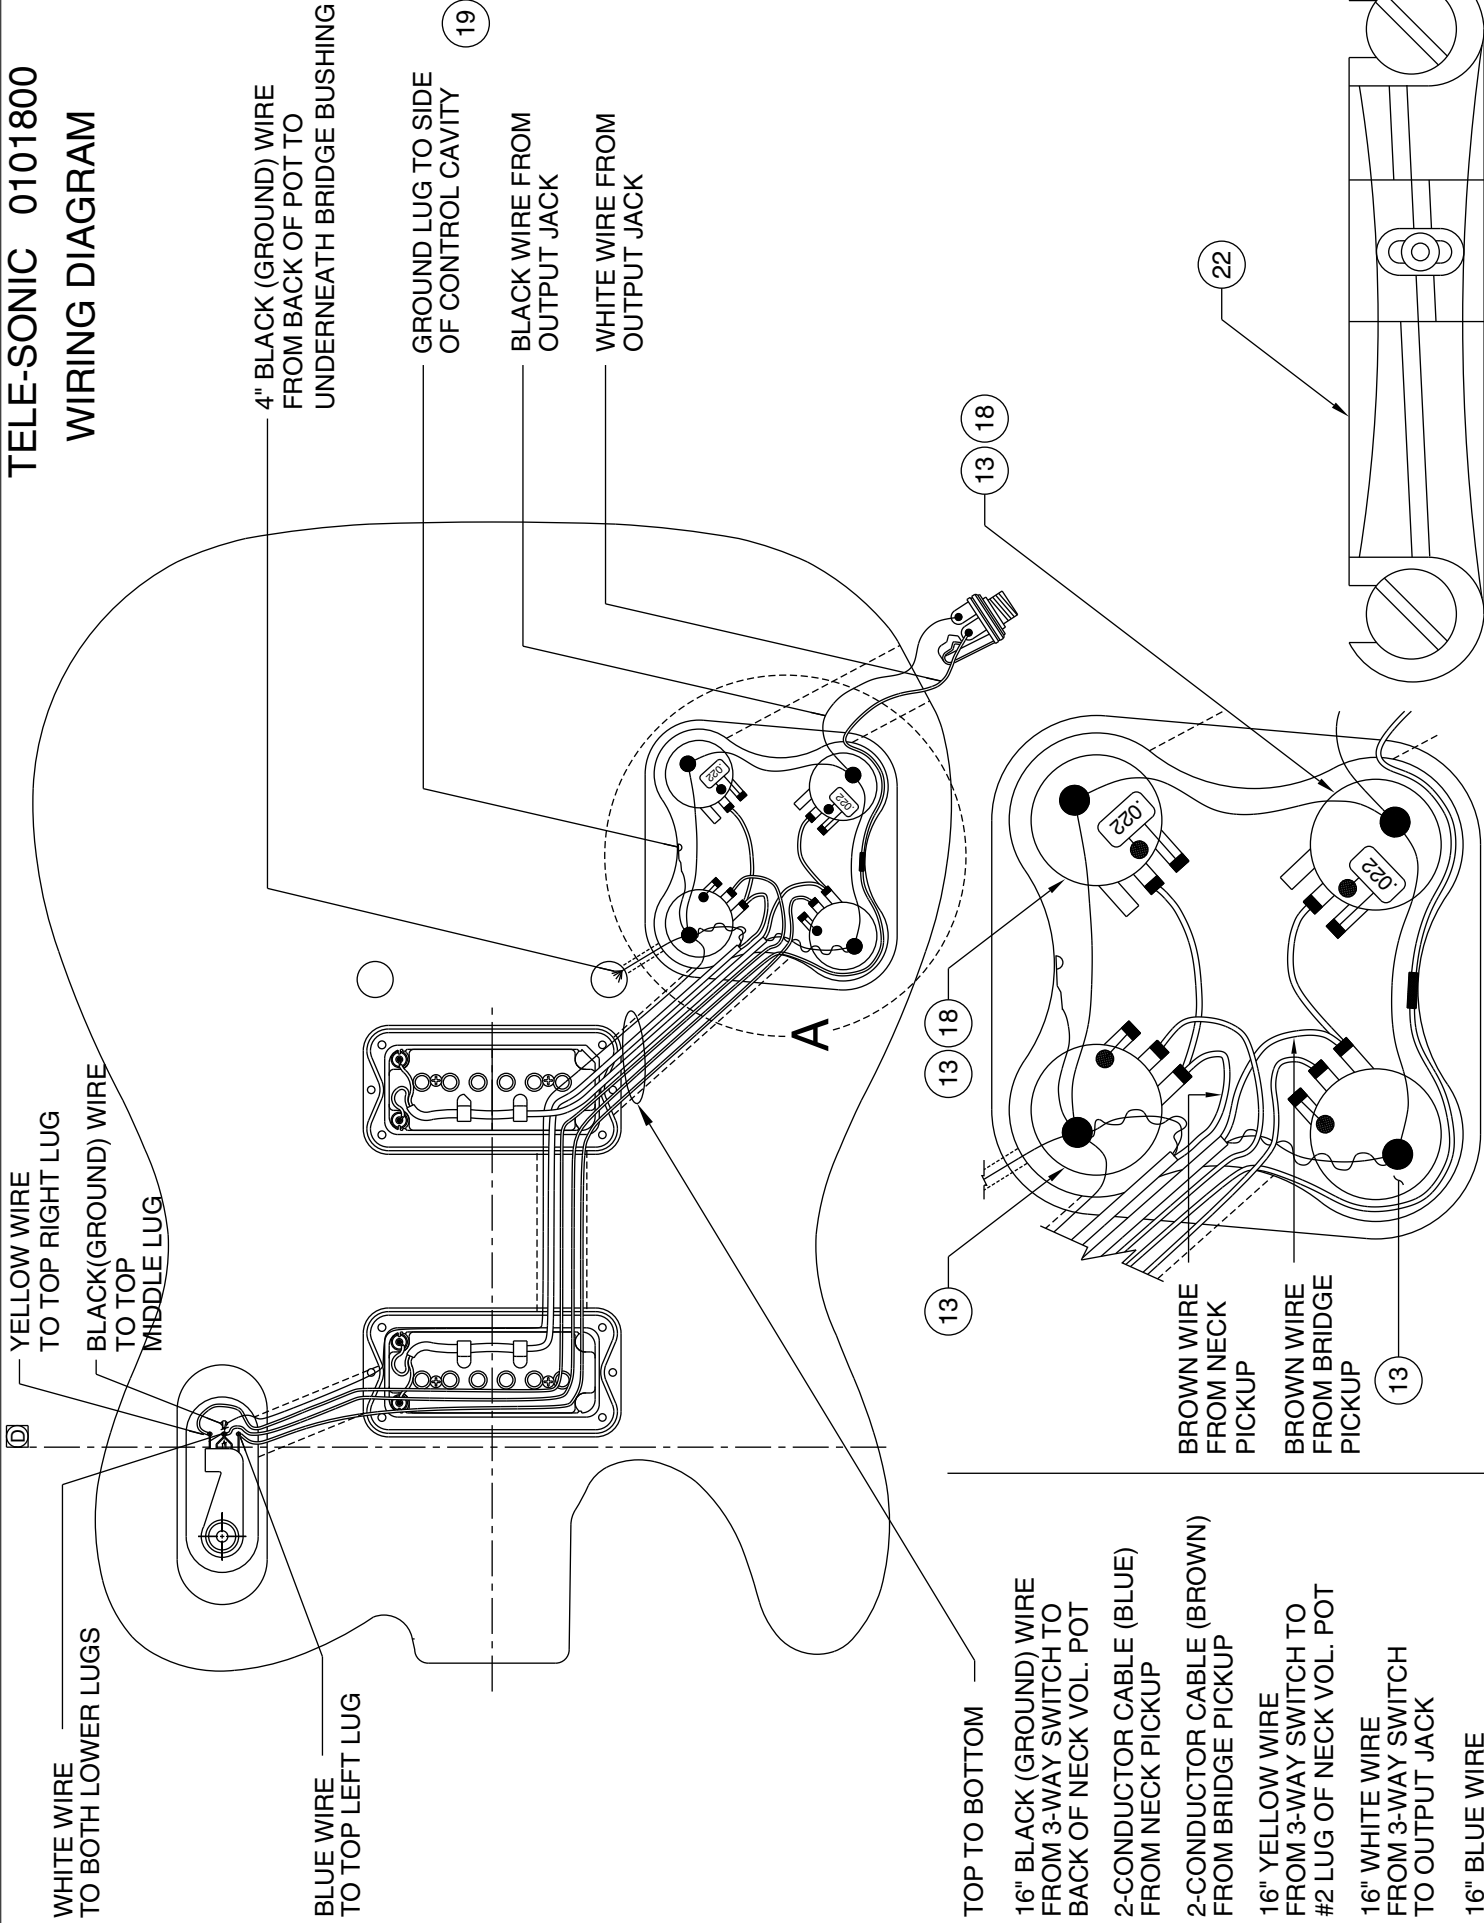

WHITE WIRE TO BOTH LOWER LUGS

BLUE WIRE TO TOP LEFT LUG

YELLOW WIRE TO TOP RIGHT LUG

BLACK (GROUND) WIRE TO TOP TO MIDDLE LUG

4" BLACK (GROUND) WIRE FROM BACK OF POT TO UNDERNEATH BRIDGE BUSHING

GROUND LUG TO SIDE OF CONTROL CAVITY

BLACK WIRE FROM OUTPUT JACK

WHITE WIRE FROM OUTPUT JACK

19

13 18

13 18

13

22

13

TOP TO BOTTOM

16" BLACK (GROUND) WIRE FROM 3-WAY SWITCH TO BACK OF NECK VOL. POT

2-CONDUCTOR CABLE (BLUE) FROM NECK PICKUP

2-CONDUCTOR CABLE (BROWN) FROM BRIDGE PICKUP

16" YELLOW WIRE FROM 3-WAY SWITCH TO #2 LUG OF NECK VOL. POT

16" WHITE WIRE FROM 3-WAY SWITCH TO OUTPUT JACK

16" BLUE WIRE FROM 3-WAY SWITCH TO #2 LUG OF BRIDGE VOL. POT

BROWN WIRE FROM NECK PICKUP

BROWN WIRE FROM BRIDGE PICKUP

DETAIL 'A'
N.T.S.


BRIDGE ASSEMBLY

TELE-SONIC 0101800

REF.#	P/N	DESCRIPTION
1	0053793000	Neck, American Tele-sonic, R/W
2	0021374000	Tuning Key, (1) Set, W/Bushing
3	0083675000	Bone Nut
4	0021537000	String Retainer
	0021405000	Mounting Screw
5	0020810000	Truss Rod Adjustment Nut
	0023811000	Truss Rod Adjusting Wrench
6	0053792xxx	Body, American Tele-sonic
7	0054038000	Neck Mounting Plate, Tilt
	0021424000	Mounting Screw
	0031571000	Tilt Adjustment Screw
	0023811000	Tilt Adjusting Wrench
8	0021453000	Strap Button
	0021422000	Mounting Screw
	0019056000	Felt Washer, Black
9	0053794000	Pickguard, Tele-sonic, B/W-W/B-W/B
	0021407000	Mounting Screw
10	0053796000	Pickup, Neck, 2K
	0016295000	Mounting Screw
	0054123000	Gasket
	0054124000	Felt
11	0053797000	Pickup, Bridge, 2K
	0016295000	Mounting Screw
	0054123000	Gasket
	0054124000	Felt
12	0053795000	Ring, De Armond 2K
	0054125000	Mounting Screw
13	0053803000	Control, 250K, Solid, (4)
	0016352000	Mounting Hex Nut
	0022384000	Lock Washer, Intl
	0031153000	Flat Washer
14	0018357000	Knob, Knurled, (4)
	0028897001	Set Screw
15	0053801000	Cover, Control
	0021407000	Mounting Screw
16	0054606000	Switch Assembly, Lever 3 - Position
17	0053802000	Cover, Switch Assembly
	0021407000	Mounting Screw
18	0024832000	Capacitor, .022uf, (2)
19	0012869000	Solder Lug
	0015116000	Mounting Screw
20	0021956000	Output Jack
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl
21	0021452000	Jack Ferrule
22	0053800000	Bridge Assembly, Wilkinson Style
	0054185000	Post, Wilkinson Bridge
	0054184000	Insert Post, Wilkinson Bridge

Body Part Number	
0053792532	Brown Sunburst
0053792538	Crimson Red Transparent

TELE-SONIC 0101800 CONTROL & SWITCH FUNCTION

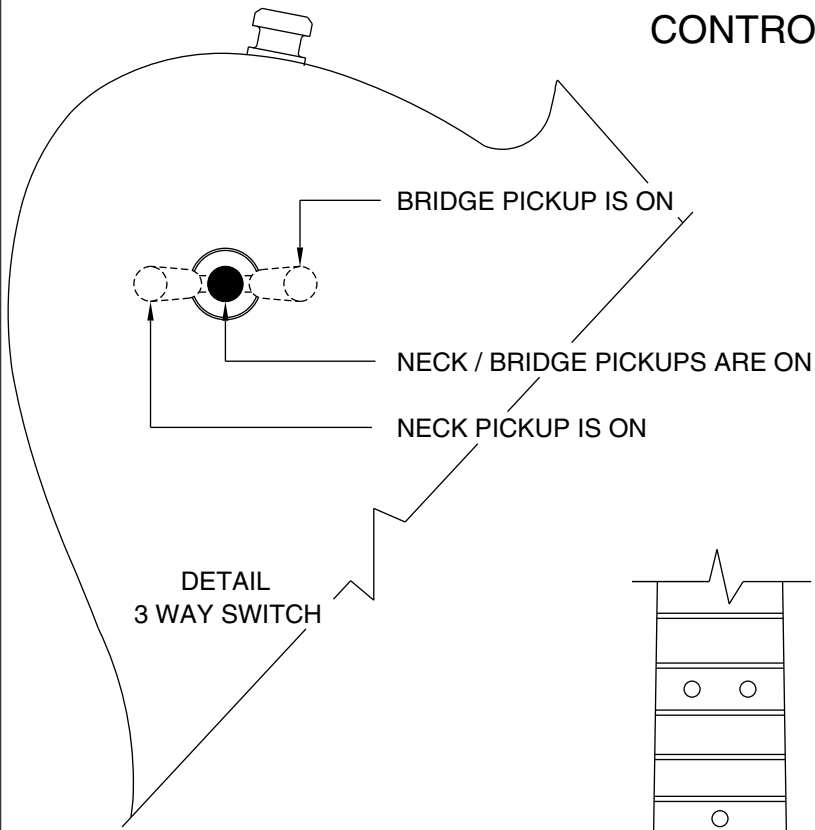

3 WAY SWITCH POSITION			
● ○ ○ 1	○ ● ○ 2	○ ○ ● 3	← 3 WAY SWITCH POSITION
VI & T1	VI & V2 TI & T2	VI & T1	← TONE/VOLUME CONTROL
■	■	□	← NECK PICKUP
□	■	■	← BRIDGE PICKUP
	■		← PICKUP IS ON
	□		← PICKUP IS OFF

SEE 3 WAY SWITCH & DETAIL DIAGRAM

○ ○ ○
1 2 3

NECK PICKUP

BRIDGE PICKUP

